

BEANAIR

BEANDEVICE® ECOSENSOR PRODUCTS LINE USER MANUAL



Ambient Temperature



Temperature, humidity
and dew point



IR temperature sensor



BeanDevice
ECOSENSOR



“Rethinking sensing technology”

Document version : 1.10

Document type : User Manual

BeanDevice® User Manual –
EcoSensor product lines

DOCUMENT

Document number		Version	1.11
External Reference		Last Publication date	22/12/2016
Author	Maxime Obr.		
Document code		Project Code	
Document Name	BeanDevice® EcoSensor User Manual		

VALIDATION

Function	Recipients	Validation	Information
Writer	Maxime Obr., embedded software engineer		
Reader	Yosri Jaouadi, Embedded software engineer		X
Approbation	Maneli PARSY	X	

DIFFUSION

Function	Recipients	Validation	Action
Reader 1	Yosri Jaouadi, Embedded software engineer	X	

Updates

Version	Date	Author	Evolution & Status
1.9	10/04/2015	Maxime Obr.	BeanDevice® ONE-BN wiring code specified
1.10	21/03/2016	Rasha Friji	<ul style="list-style-type: none"> Standalone option Battery level display
1.11	22/12/2016	Salah Riahi	<ul style="list-style-type: none"> Exporting a log file to Excel video added





“Rethinking sensing technology”

Document version : 1.10

Document type : User Manual

BeanDevice® User Manual –
EcoSensor product lines

Contents

- 1. TECHNICAL SUPPORT..... 8
- 2. VISUAL SYMBOLS DEFINITION 9
- 3. ACRONYMS AND ABBREVIATIONS 10
- 4. RELATED DOCUMENTS & VIDEOS 11
 - 4.1 Applications Notes..... 11
 - 4.2 Technical Notes..... 12
 - 4.3 Related videos 13
- 5. BEANDEVICE® VERSIONS..... 14
- 6. DOCUMENT ORGANISATION..... 15
- 7. ECOSENSOR PRODUCT LINE PRESENTATION 16
 - 7.1 About Ecosensor product line 16
 - 7.2 Common specifications..... 17
 - 7.3 BeanDevice® ONE-BN 19
 - 7.3.1 Applications 19
 - 7.3.2 Binary/Pulse counter specifications 20
 - 7.4 BeanDevice® ONE-T..... 20
 - 7.4.1 Applications 20
 - 7.4.2 Product reference..... 20
 - 7.4.3 Temperature sensor specification 21
 - 7.5 BeanDevice® ONE-TIR..... 22
 - 7.5.1 Applications 22
 - 7.5.2 Product reference..... 23





“Rethinking sensing technology”

Document version : 1.10

Document type : User Manual

BeanDevice® User Manual –
EcoSensor product lines

- 7.5.3 IR temperature sensor specifications 23
- 7.5.4 Sensor field of view and accuracy 23
- 7.6 BeanDevice® ONE-TH 26
 - 7.6.1 Applications 26
 - 7.6.2 Product reference 26
 - 7.6.3 Temperature/Humidity sensors specifications 26
- 7.7 Products focus 27
 - 7.7.1 BeanDevice® ONE-TIR..... 27
 - 7.7.2 BeanDevice® ONE-BN 29
 - 7.7.3 BeanDevice® ONE-T 31
 - 7.7.1 BeanDevice® ONE-TH 32
 - 7.7.2 Led description 34
 - 7.7.3 Enclosure mechanical drawing 34
 - 7.7.4 Antenna specifications..... 37
- 7.8 BeanDevice® Power supply 38
- 8. BEANDEVICE® INSTALLATION GUIDELINE 39
 - 8.1 Powering ON your BeanDevice® ONE-XX 39
 - 8.2 Primary cell replacement..... 40
 - 8.3 BeanDevice® ONE-BN – wiring code 42
 - 8.4 BeanDevice® Network Association 45
 - 8.5 DataLogger feature 45
 - 8.6 OTAC (Over-the-air-Configuration) process 45
 - 8.7 Coexistence With others Frequencies at 2.4 GHz 45
 - 8.8 Operating temperature 46
 - 8.9 Mechanical mounting 46
 - 8.1 Factory settings..... 47
- 9. BEANDEVICE® SUPERVISION FROM THE BEANSCAPE 48
 - 9.1 Starting the BeanScape® 48
 - 9.2 BeanDevice® status Information 50
 - 9.2.1 Frame: Identity 50
 - 9.2.2 Frame : Wireless Network Diagnostic 51
 - 9.2.3 Frame : Power Supply diagnostic 51
 - 9.2.4 Frame : System 53





“Rethinking sensing technology”

Document version : 1.10

Document type : User Manual

BeanDevice® User Manual –
EcoSensor product lines

- 9.3 Frame : BeanDevice® 53
 - 9.3.1 Frame : Product Version 53
 - 9.3.2 Frame : Current Data Acquisition mode 54
- 9.4 Main settings 55
 - 9.4.1 Tab : Custom Display 56
 - 9.4.2 Tab: Notes 57
 - 9.4.3 Tab: Data Acquisition configuration 57
 - 9.4.4 Tab: DataLogger 61
 - 9.4.5 Tab : System config 61
 - 9.4.6 Tab : Sleep mode management 63
- 9.5 Sensor channel profile 65
 - 9.5.1 Sensor channel status 66
 - 9.5.1 Sensor configuration & calibration frame 69
 - 9.5.2 Graphical display 74
- 9.6 Datalogger configuration 78
- 9.7 Log file & folder organization (for experienced user user) 79
 - 9.7.1 Log file system overview 79
 - 9.7.2 Log file directory 79
 - 9.7.3 Log folder 80
 - 9.7.4 Log file size configuration 82
 - 9.7.5 Log file generation 83
 - 9.7.6 Cache Data configuration (for Graph) 83
 - 9.7.7 Log file related to data acquisition 84
 - 9.7.8 Log file related to Wireless Network diagnostic 85
- 10. BEANDEVICE® MAINTENANCE & SUPERVISION (FOR EXPERIENCED USER) 90
 - 10.1 Extending the battery life 90
 - 10.1 Over-the-air Configuration (OTAC) parameters 90
 - 10.1.1 Level 1: End-user OTAC parameters 91
 - 10.2 Network diagnostic from your BeanScape® software 92
 - 10.2.1 Sensor operating status 92
 - 10.2.2 Displaying Network information 92
 - 10.2.1 System maintenance (for expert only) 95
 - 10.2.1 Scrolling menu « BeanSensor » 96





"Rethinking sensing technology"

Document version : 1.10

Document type : User Manual

BeanDevice® User Manual –
EcoSensor product lines

11. FAQ 101



Please consider the environment before printing this document.

Page : 6 / 101



“Rethinking sensing technology”

Document version : 1.10

Document type : User Manual

BeanDevice® User Manual –
EcoSensor product lines

Disclaimer

The information contained in this document is the proprietary information of Beanair.

The contents are confidential and any disclosure to persons other than the officers, employees, agents or subcontractors of the owner or licensee of this document, without the prior written consent of Beanair GmbH, is strictly prohibited.

Beanair makes every effort to ensure the quality of the information it makes available. Notwithstanding the foregoing, Beanair does not make any warranty as to the information contained herein, and does not accept any liability for any injury, loss or damage of any kind incurred by use of or reliance upon the information.

Beanair disclaims any and all responsibility for the application of the devices characterized in this document, and notes that the application of the device must comply with the safety standards of the applicable country, and where applicable, with the relevant wiring rules.

Beanair reserves the right to make modifications, additions and deletions to this document due to typographical errors, inaccurate information, or improvements to programs and/or equipment at any time and without notice.

Such changes will, nevertheless be incorporated into new editions of this document.

Copyright: Transmittal, reproduction, dissemination and/or editing of this document as well as utilization of its contents and communication thereof to others without express authorization are prohibited. Offenders will be held liable for payment of damages. All rights are reserved.

Copyright © Beanair GmbH 2015



Please consider the environment before printing this document.

Page : 7 / 101



“Rethinking sensing technology”

Document version : 1.10

Document type : User Manual

BeanDevice® User Manual –
EcoSensor product lines

1. TECHNICAL SUPPORT

For general contact, technical support, to report documentation errors and to order manuals, contact **Beanair Technical Support Center** (BTSC) at:
tech-support@Beanair.com

For detailed information about where you can buy the Beanair equipment/software or for recommendations on accessories and components visit:




www.Beanair.com

To register for product news and announcements or for product questions contact Beanair’s Technical Support Center (BTSC).

Our aim is to make this user manual as helpful as possible. Please keep us informed of your comments and suggestions for improvements. Beanair appreciates feedback from the users.



2. VISUAL SYMBOLS DEFINITION

Symbols	Definition
	<p><u>Caution or Warning</u> – Alerts the user with important information about Beanair wireless sensor networks (WSN), if this information is not followed, the equipment /software may fail or malfunction.</p>
	<p><u>Danger</u> – This information MUST be followed if not you may damage the equipment permanently or bodily injury may occur.</p>
	<p><u>Tip or Information</u> – Provides advice and suggestions that may be useful when installing Beanair Wireless Sensor Networks.</p>



3. ACRONYMS AND ABBREVIATIONS

AES	Advanced Encryption Standard
CCA	Clear Channel Assessment
CSMA/CA	Carrier Sense Multiple Access/Collision Avoidance
GTS	Guaranteed Time-Slot
kSps	Kilo samples per second
LLC	Logical Link Control
LQI	Link quality indicator
LDCDA	Low duty cycle data acquisition
MAC	Media Access Control
PAN	Personal Area Network
PER	Packet error rate
RF	Radio Frequency
SD	Secure Digital
WSN	Wireless sensor Network





“Rethinking sensing technology”

Document version : 1.10

Document type : User Manual

BeanDevice® User Manual –
EcoSensor product lines

4. RELATED DOCUMENTS & VIDEOS

In addition to this User manual, please consult the related application notes, technical notes and videos:

4.1 APPLICATIONS NOTES

Document name (Click on the weblink)	Related product	Description
<u>AN RF 007 :“ Beanair WSN Deployment”</u>	All BeanAir products	Wireless sensor networks deployment guidelines
<u>AN RF 006 – „How to extend your wireless range“</u>	All BeanAir products	A guideline very useful for extending your wireless range
<u>AN RF 005 – BeanGateway® & Data Terminal Equipment Interface</u>	BeanGateway®	DTE interface Architecture on the BeanGateway®
<u>AN RF 003 - “IEEE 802.15.4 2.4 GHz Vs 868 MHz”</u>	All BeanAir products	Comparison between 868 MHz frequency band and a 2.4 GHz frequency band.
<u>AN RF 002 – “Structural Health monitoring on bridges”</u>	All BeanAir products	The aim of this document is to overview Beanair® products suited for bridge monitoring, their deployment, as well as their capacity and limits by overviewing various Data acquisition modes available on each BeanDevice®.



4.2 TECHNICAL NOTES

Document name (Click on the weblink)	Related product	Description
<u>TN RF 013 – « OPC configuration »</u>	BeanScope® Premium+	The aim of this document is to help deploying the OPC DA and all associated services.
<u>TN RF 012– « BeanDevice® battery life in streaming mode »</u>	All the products	The aim of this document is to describe the autonomy performance of the BeanDevice® SmartSensor® and ProcessSensor® product line in streaming packet mode.
<u>TN RF 011 – « Coexistence of Beanair WSN at 2.4GHz »</u>	All the products	This document aims to highlight the issues affecting co-existence of Beanair WSN (IEEE 802.15.4) in the presence of interference.
<u>TN RF 010 – « BeanDevice® Power Management »</u>	All the BeanDevice®	This technical note describes the sleeping & active power mode on the BeanDevice®.
<u>TN RF 009 – « BeanGateway® management on LAN infrastructure »</u>	BeanGateway®	BeanGateway® integration on a LAN infrastructure
<u>TN RF 008 – “Data acquisition modes available on the BeanDevice®”</u>	All the BeanDevice®	Data acquisition modes available on the BeanDevice®
<u>TN RF 007 – “BeanDevice® DataLogger User Guide ”</u>	All the BeanDevice®	This document presents the DataLogger feature on the BeanDevice®
<u>TN RF 006 – “WSN Association process”</u>	All the BeanDevice®	Description of the BeanDevice® network association
<u>TN RF 005 – “Pulse counter & binary Data acquisition on the BeanDevice® SUN-BN”</u>	BeanDevice® SUN-BN	This document presents Pulse counter (ex: energy metering application) and binary Data acquisition features on the BeanDevice® SUN-BN.
<u>RF TN 003- “Aggregation capacity of wireless sensor networks”</u>	All the products	Network capacity characterization of Beanair Wireless Sensor Networks
<u>RF TN 002 V1.0 - Current consumption in active & sleeping mode</u>	BeanDevice®	Current consumption estimation of the BeanDevice in active and sleeping mode
<u>RF TN 001 V1.0- Wireless range benchmarking</u>	BeanDevice®	Wireless range benchmarking of the BeanDevice®



4.3 RELATED VIDEOS



[All the videos are available on our Youtube channel](#)

Beanair video link (Youtube)	Related products
Company Presentation	All
BeanGateway® - Ethernet Outdoor version introduction	BeanGateway® - Ethernet Outdoor version introduction
BeanGateway® – Ethernet Indoor version presentation	BeanGateway® Ethernet Indoor version
BeanDevice® AN-XX wireless range demonstration	BeanDevice® AN-XX & BeanDevice® AN-XX Extender
BeanDevice® AN-XX presentation	BeanDevice® AN-XX & BeanDevice® AN-XX Extender
BeanDevice® AX-3D presentation	BeanDevice® AX-3D
BeanDevice® HI-INC presentation	BeanDevice® HI-INC
BeanDevice® AX-3DS presentation	BeanDevice® AX-3DS
BeanScape® – WSN supervision software	BeanScape®
BeanGateway® Ethernet/LAN Configuration, directly connected to the Laptop/PC	BeanGateway®
Wireless sensors profile deletion from the BeanGateway® Database	All





“Rethinking sensing technology”

Document version : 1.10

Document type : User Manual

BeanDevice® User Manual –
EcoSensor product lines

5. BEANDEVICE® VERSIONS

	<i>Hardware</i>	<i>Embedded Software</i>	<i>Wireless Stack</i>
<i>BeanDevice® ONE-XX</i>	<i>V1.0</i> – First hardware Version <i>V1.1</i> – Hardware filter added on pulse inputs (BeanDevice® ONE-BN)	<i>V1.0</i> – First version	IEEE 802.15.4 V2006



These ID versions should be transmitted to our technical support center when you encountered a material or software issue.



Please consider the environment before printing this document.

Page : 14 / 101

6. DOCUMENT ORGANISATION

This manual is organized in 7 chapters, as follows:

BeanDevice® product presentation

- Introduces BeanDevice® Ecosensor products line :
 - BeanDevice® ONE-T
 - BeanDevice® ONE-TH
 - BeanDevice® ONE-BN
 - BeanDevice® ONE-TIR

Data acquisition mode description

- Details the data acquisition mode available on the BeanDevice®

BeanDevice® installation guidelines

- Details the installation guidelines of the BeanDevice®:
 - Power Management
 - BeanDevice® power supply
 - BeanDevice® network association
 - Datalogger feature
 - OTAC (over-the-air configuration) process

BeanDevice® supervision from the Beanscape®

- Details the BeanDevice® supervision from the Beanscape®

BeanDevice® maintenance & supervision (for experienced user)

- Details the BeanDevice® maintenance (for experienced user)

Installation procedures

- Details the installation procedures



7. ECOSENSOR PRODUCT LINE PRESENTATION




It is highly recommended to read all the user manual related to Beanair software & equipment (BeanScape®, BeanGateway®, BeanDevice®) before getting start your BeanDevice®.

7.1 ABOUT ECOSENSOR PRODUCT LINE



Eco-friendly wireless Sensor dedicated to environmental monitoring

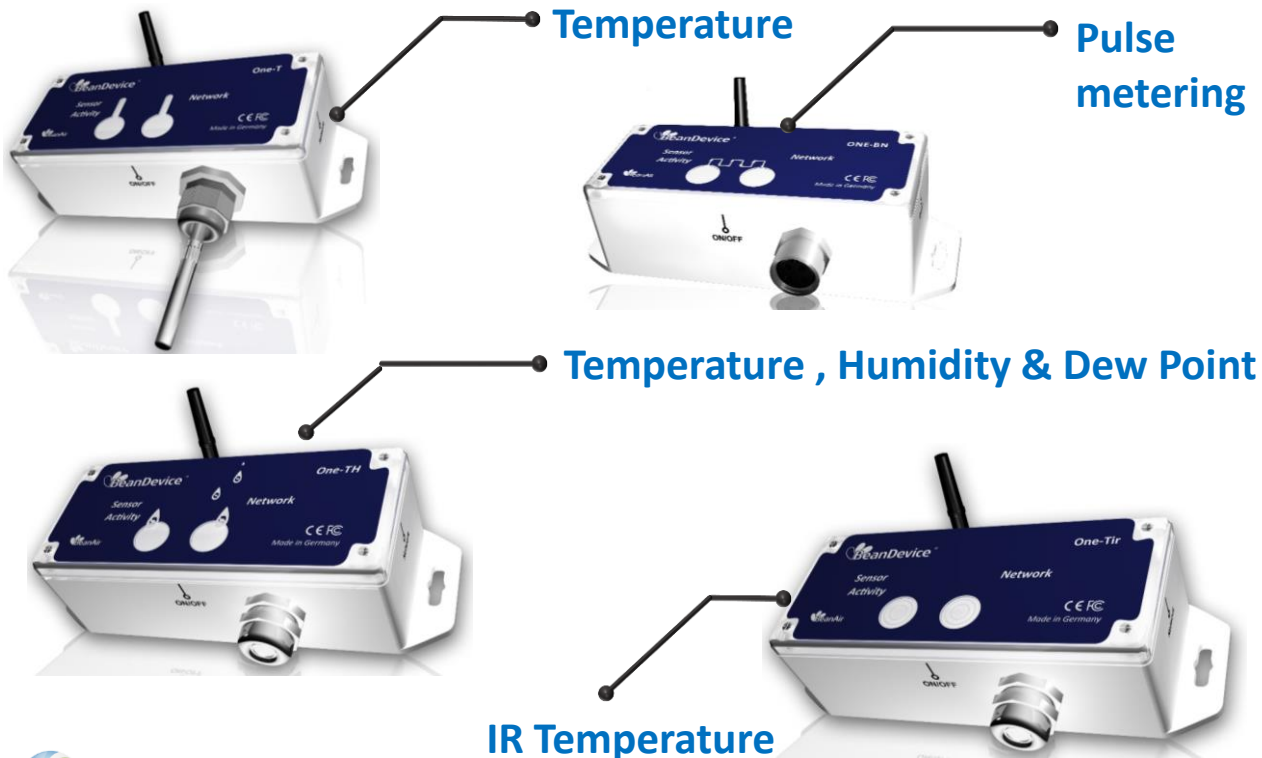

12



7.2 COMMON SPECIFICATIONS

This section describes the common technical features for the following BeanDevice®

- ✓ *BeanDevice® ONE-T*
- ✓ *BeanDevice® ONE-TH*
- ✓ *BeanDevice® ONE-TIR*
- ✓ *BeanDevice® ONE-BN*

RF Specifications	
Wireless Protocol Stack	IEEE 802.15.4 (2006 version)
WSN Topology	Point-to-Point / Star
Data rate	250 Kbits/s
RF Characteristics	ISM 2.4GHz – 16 Channels
TX Power	-7 dBm to +18 dBm
Receiver Sensitivity	-95.5 dBm to -104 dBm
Max. Radio Range	300 m (L.O.S)
Antenna	Omdirectional antenna 2.2dBi

Over-the-air configuration (OTAC) parameters	
Data Acquisition mode	Low Duty Cycle Data Acquisition (LDCDA) Mode: 1s to 24 hour Survey mode: 1s to 24 hour
Alarm Threshold	2 high levels alarms & 2 low levels alarms
Power Mode	Sleeping, Sleeping with Network Listening & Active
TX Power	-7 dBm / -1 dBm / 5 dBm / 11 dBm / 15 dBm / 18 dBm

Embedded data logger	
Storage capacity	up to 1 000 000 data points
Wireless data downloading	3 minutes to download the full memory (average time)

Environmental and Mechanical	
Enclosure	Polycarbonate, Watertight IP67 – Fire Protection: ULV94 Enclosure dimensions (LxHxh) : 119 mm x 35 mm x 35 mm Weight (battery included): 120g
Operating Temperature	-40°C to +75°C
Norms	FCC & CE compliant





"Rethinking sensing technology"

Document version : 1.10

Document type : User Manual

BeanDevice® User Manual –
EcoSensor product lines

ROHS - Directive 2002/95/EC

Power supply

Current consumption @3.3 Volts

- During data acquisition: 20 to 30 mA
- During Radio transmission: 40 mA @ 5dBm, 70 mA @ 18 dBm
- During sleeping: < 10 μ A

Included primary cell

Lithium-thionyl chloride battery with 1800 mAh capacity (AA size)

Option(s)

Calibration

COFRAC connected calibration (on 1 point)

Choose an ultra low power wireless sensor

RF transmission

Battery life (temperature room 25°C)

Every 2 minutes

22 months

Every 5 minutes

51 months

Every 10 minutes

102 months



Please consider the environment before printing this document.


Page : 18 / 101

7.3 BEANDEVICE® ONE-BN

7.3.1 Applications

This product is adapted for the following applications:

- ✓ Energy Metering (Gas, Water, Electric)
- ✓ Process control
- ✓ Technical Building Management
- ✓ Logistics

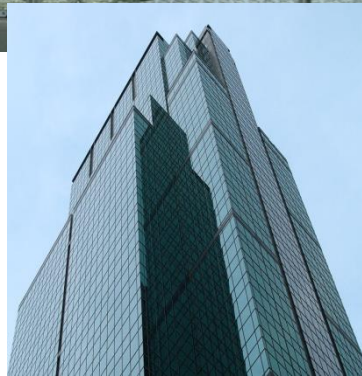

7.3.2 Binary/Pulse counter specifications



For further information about the “Pulse counter” and “Binary” data acquisition, please read the technical note [TN_RF_005: “Pulse counter & binary data acquisition on the BeanDevice® ONE-BN”](#).

7.4 BEANDEVICE® ONE-T

7.4.1 Applications

This product is adapted for the following applications:



- ✓ Technical Building Management
- ✓ Cold chain traceability
- ✓ Medical lab & white room
- ✓ Solar Panels Monitoring
- ✓ Transport
- ✓ Air-conditioning System (HVAC)

7.4.2 Product reference

Product Reference	
BND-ONE-T- SA-CL	
<p>SA—temperature sensor accuracy & design</p> <ul style="list-style-type: none"> · ST : standard accuracy · HA: High accuracy · HAEY: High accuracy with eyelet probe for wall mounting (minimum cable length 25 cm) 	<p>CL—Sensor Cable length</p> <p>Sensor cable length in cm</p> <p>Maximum cable length: 150 cm</p> <p>If this field is empty: no cable length</p>
<p>Example 1: BND-ONE-T-ST, wireless temperature sensor with 1 probe, standard accuracy (temperature range -25°C to +75°C), no cable length</p> <p>Example 2: BND-ONE-T-HA-120, wireless temperature sensor with 1 probe, High accuracy (temperature range -10°C to +60°C), cable length 120 cm</p> <p>Example 3: BND-ONE-T-HAEY-25, wireless temperature sensor with eyelet probe for wall mounting, high accuracy (temperature range -10°C to +60°C), cable length 25 cm</p>	



7.4.3 Temperature sensor specification

Temperature probe types	
Probe type HAEY	Temperature probe with eyelet mounting  (Length 50 mm, Diameter 6 mm, Hole diam. 5.3 mm)
Probe type ST & HA	Length 40 mm, Diameter 6 mm 

Temperature sensor specifications		
Temperature Sensor technology	Silicon temperature probe — Probe watertightness : IP67 Mechanical assembly type : steel tube	
Measurement range	High accuracy temperature probe: BND-ONE-T- HA-CL BND-ONE-T- HAEY-CL	-10 °C to +60 °C
	Standard accuracy temperature probe with cable length: BND-ONE-T- ST-CL	-50 °C to +150 °C
	Standard accuracy temperature probe without cable length: BND-ONE-T- ST	-25°C to +75°C
Measurement accuracy	High accuracy temperature probe: BND-ONE-T- HA-CL BND-ONE-T- HAEY-CL	±0.2°C between -10°C and -5 °C ±0.1°C between -5°C and +45°C ±0.2°C between +45°C and +60°C
	Standard accuracy temperature probe : BND-ONE-T- ST-CL	±0.3 °C between -10 °C and +60 °C ±(0.3 + 0.012(T-60)) °C between +60 °C and +150 °C +/- (0.3 - 0.012(T+10)) °C between -50 °C and -10 °C
Sensor resolution	High accuracy temperature probe: BND-ONE-T- HA-CL BND-ONE-T- HAEY-CL	0.0034 °C
	Standard accuracy temperature probe : BND-ONE-T- ST-CL	0.1 °C



7.5 BEANDEVICE® ONE-TIR



Figure 1 : BeanDevice® ONE-TIR

7.5.1 Applications

This product is adapted for the following applications:

- ✓ Railway temperature control
- ✓ Industrial temperature control of moving parts
- ✓ Gas detection
- ✓ Plastic, glass & metal processing
- ✓ Movement Detection
- ✓ Chemistry & pharmaceutical industry
- ✓ Automotive diagnosis
- ✓ Electrical Systems & equipment monitoring
- ✓ Healthcare



7.5.2 Product reference

Product reference

BND-ONE-TIR

7.5.3 IR temperature sensor specifications

IR temperature Sensor Specification

Measurement range	-40°C to +85°C for ambient temperature (Ta) -70°C to +380°C for object temperature (To)
Sensor Technology	Thermopile
Emissivity coefficient	0 to 1 (Configurable from the BeanScope®)
Accuracy	CF. IR Temperature Table
Measurement resolution	0.02 °C
Field of View (FOV)	Peak zone ±0°, Width Zone ±90°C . See curve

7.5.4 Sensor field of view and accuracy

All accuracy specifications apply under settled isothermal conditions only. Furthermore, the accuracy is only valid if the object fills the FOV of the sensor completely.

Ta (Ambient temperature) and To (Object temperature)



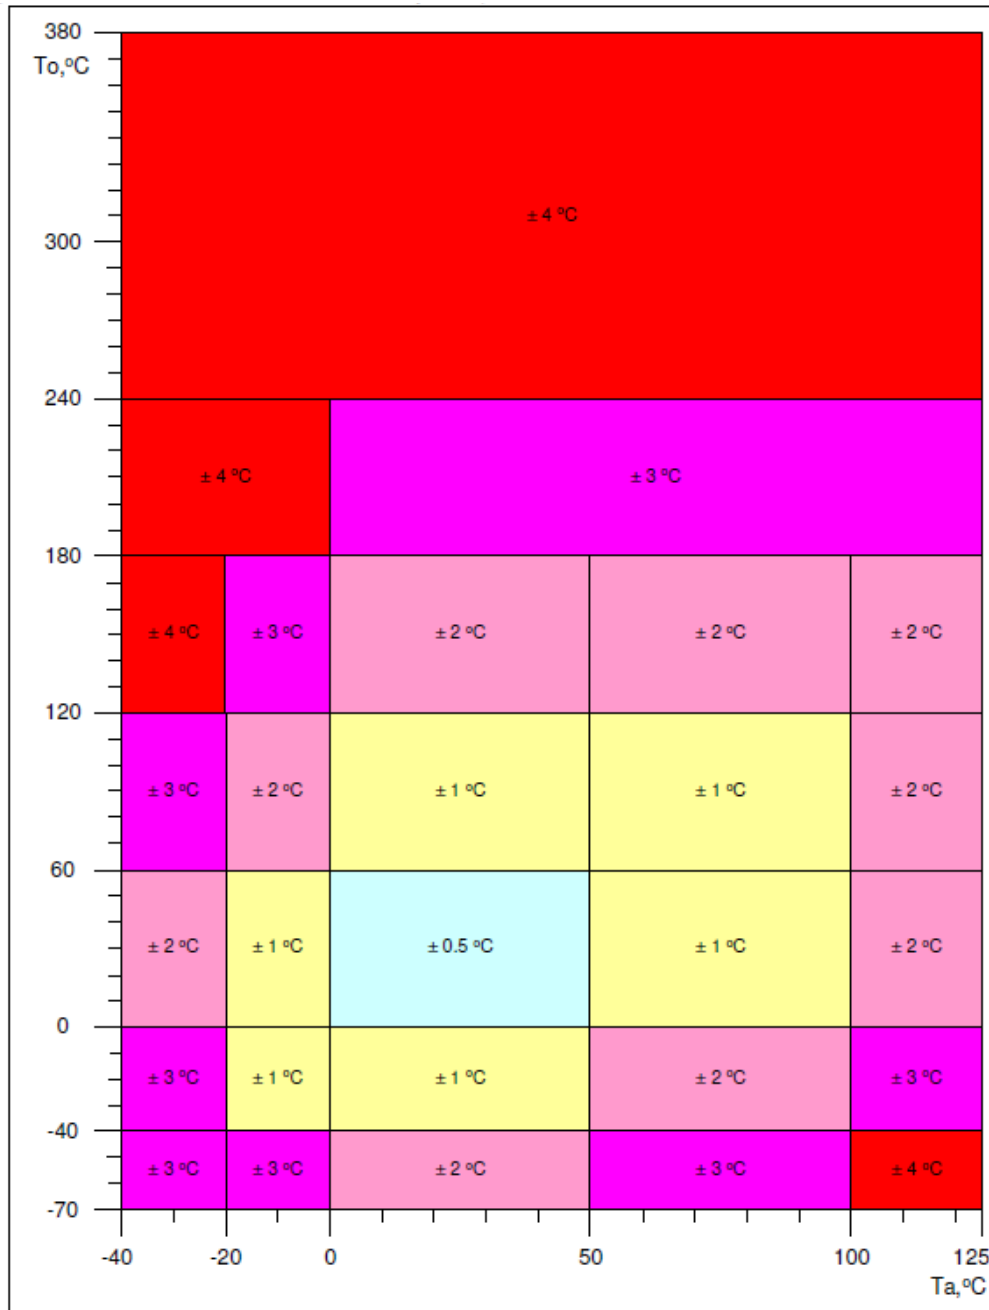


Figure 2: ONE-TIR sensor accuracy



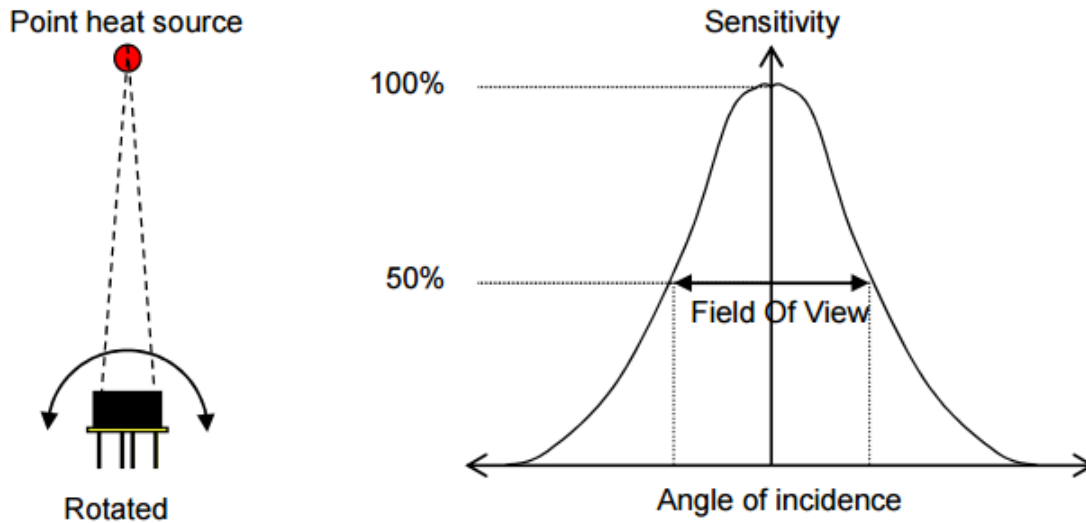


Figure 3: Field of view measurement

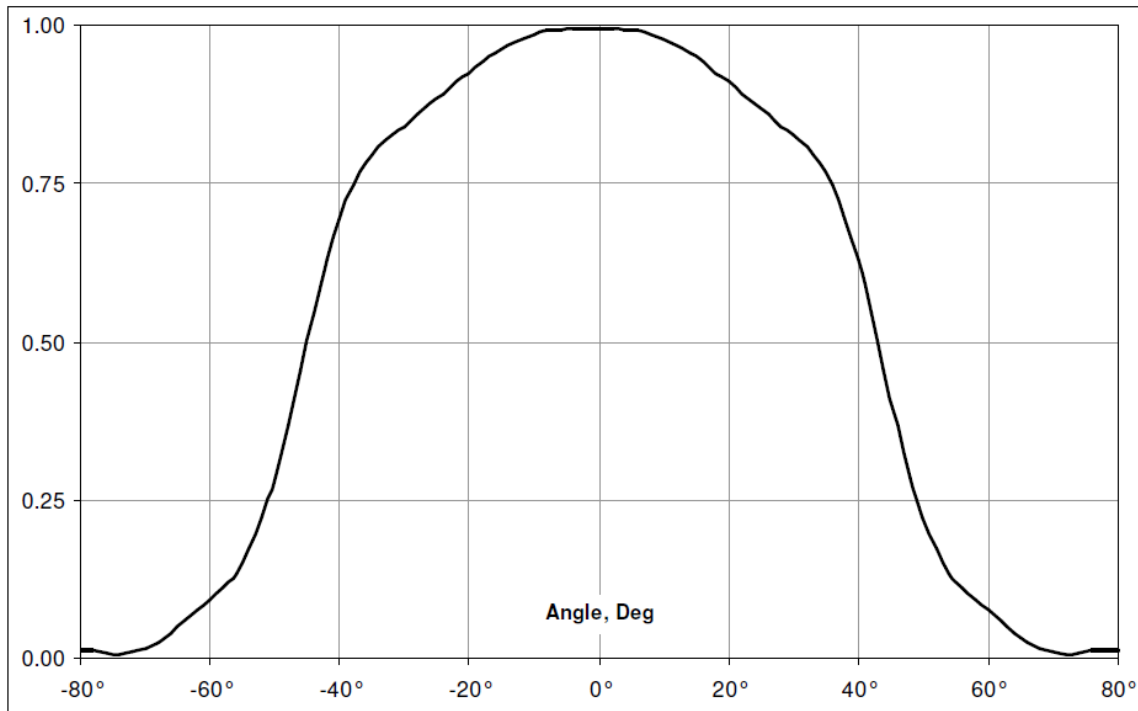


Figure 4 : Typical FOV curve



7.6 BEANDEVICE® ONE-TH


7.6.1 Applications

- ✓ HVAC (heating, ventilation, and air conditioning)
- ✓ Cold chain traceability
- ✓ Medical lab & clean room
- ✓ Agriculture & Greenhouse
- ✓ Environment

7.6.2 Product reference

Product Reference
BND-ONE-TH

7.6.3 Temperature/Humidity sensors specifications

Sensor filter cap mechanical specifications		
Filter cap	Glass grommet and sinter filter	
Pressure Resistant	Up to 16 bar	
Dew formation resistant	Yes	

Temperature sensor specifications	
Temperature Sensor technology	Thermistor
Measurement range	- 40°C to +85 °C
Measurement accuracy	±0.2 °C (0 ... 60 °C)
Sensor resolution	0.015 °C
Long term drift	< 0.05 K / year
Response time	< 10s with sensor cap

Humidity sensor specifications	
Humidity Sensor technology	Capacitive polymer humidity sensor



Measurement range	0 to 100% RH
Sensor accuracy (at 23°C)	±1.8% RH (10 ... 80% RH)
Sensor resolution	0.02% RH
Hysteresis (50% rH)	< ±1% RH
Linearity error	< ±1% RH
Response time	<10s with sensor cap
Long term drift	< 0.5 % RH / year

7.7 PRODUCTS FOCUS

7.7.1 BeanDevice® ONE-TIR

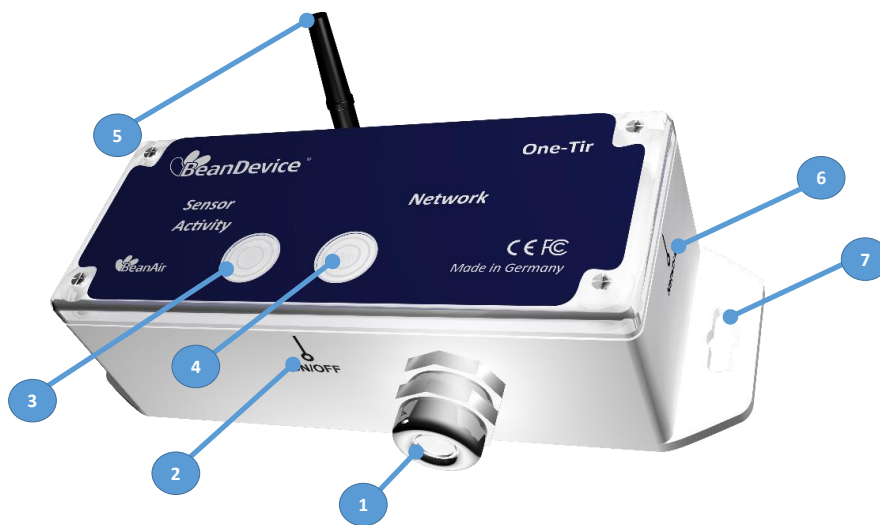


Figure 5: BeanDevice® ONE-TIR -Product description

Number	Function	Description
1	IR Sensor	Waterproof (IP67) infrared Sensor
2	ON/OFF	ON/OFF Reed Switch. Activated using a magnet. (waiting time: 2 seconds)



		<p>If the “Network LED” illuminates in GREEN color, the BeanDevice® is powered on.</p> <p>If the “Network LED” illuminates in RED color, the BeanDevice® is powered off.</p>
3	Sensor/Activity LED	<p>Bi-color led light, either displays in GREEN or RED color depending up on the status of the device</p> <p>See Led Description table</p>
4	Network LED	<p>Bi-color led light for network status, GREEN or RED depending upon the status of the network.</p> <p>See Led Description table</p>
5	Antenna	<p>2.2 dBi omnidirectional antenna</p> <p>See antenna description section</p>
6	Network	<p>“Network” non-contact button restores the factory settings on the BeanDevice®.</p> <p>Point the pole of the Neodymium magnet that was provided with your BeanDevice® towards the “Network” label circle. Hold the magnet for approximately 2s</p> <p>Please read the following section for more information “click here”</p>
7	Eyelet	<p>Eyelet for screw mounting</p>



7.7.2 BeanDevice® ONE-BN



Figure 6 : BeanDevice® ONE-BN - Product description

Number	Function	Description
1	Binary inputs	M12-5pins A coding socket dedicated to pulse measurement <i>Please read the following section for more information</i> “click here”
2	ON/OFF	ON/OFF Reed Switch. Activated using a magnet. (waiting time: 2 seconds) If the “ Network LED ” illuminates in GREEN color, the BeanDevice® is powered on. If the “ Network LED ” illuminates in RED color, the BeanDevice® is powered off.
3	Sensor/Activity LED	Bi-color led light, either displays in GREEN or RED color depending up on the status of the device



		See Led Description table
4	Network LED	Bi-color led light for network status, GREEN or RED depending upon the status of the network. See Led Description table
5	Antenna	2.2 dBi omnidirectional antenna See antenna description section
6	Network	<p>“Network” non-contact button restores the factory settings on the BeanDevice®.</p> <p>Point the pole of the Neodymium magnet that was provided with your BeanDevice® towards the “Network” label circle. Hold the magnet for approximately 2s</p> <p><i>Please read the following section for more information</i> “click here”</p>



7.7.3 BeanDevice® ONE-T

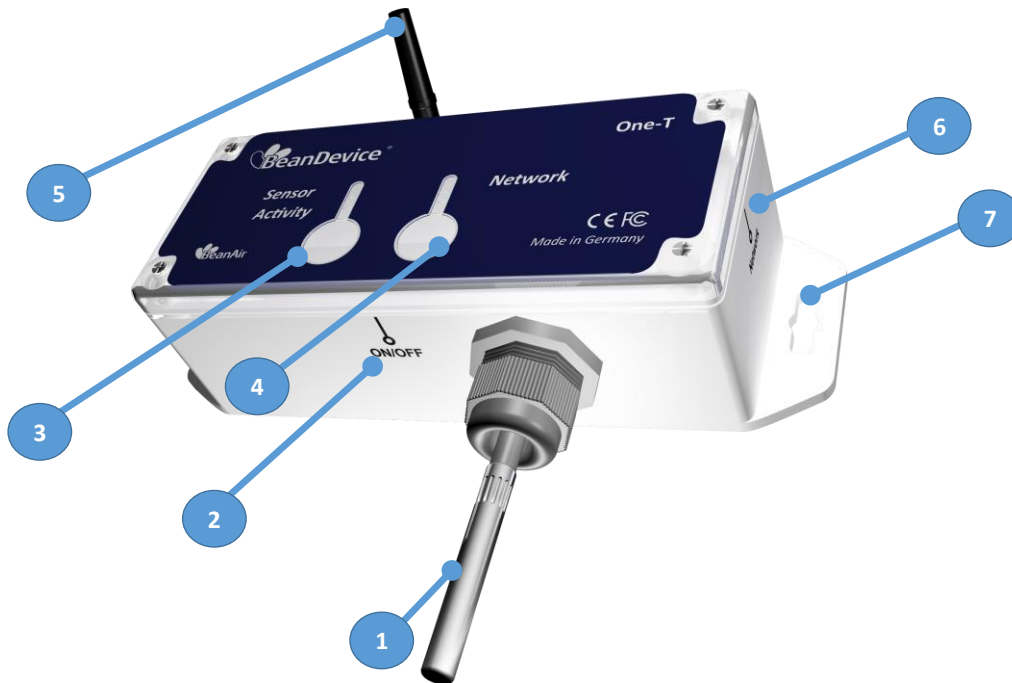


Figure 7: BeanDevice® ONE-T - Product description

Number	Function	Description
1	Silicon Temperature Sensor	Silicon temperature sensor Up to 1.5 meters of cable length
2	ON/OFF	ON/OFF Reed Switch. Activated using a magnet. (waiting time : 2 seconds) If the " Network LED " illuminates in GREEN color, the BeanDevice® is powered on. If the " Network LED " illuminates in RED color, the BeanDevice® is powered off.
3	Sensor/Activity LED	Bi-color led light, either displays in GREEN or RED color depending up on the status of the device See Led Description table
4	Network LED	Bi-color led light for network status, GREEN or RED depending upon the status of the network.



		See Led Description table
5	Antenna	2.2 dBi omnidirectional antenna See antenna description section
6	Network	“Network” non-contact button restores the factory settings on the BeanDevice®. Point the pole of the Neodymium magnet that was provided with your BeanDevice® towards the “Network” label circle. Hold the magnet for approximately 2s Please read the following section for more information “click here”
7	Eyelet	Eyelet for screw mounting

7.7.1 BeanDevice® ONE-TH



Figure 8: BeanDevice® ONE-TH - Product description





“Rethinking sensing technology”

Document version : 1.10

Document type : User Manual

BeanDevice® User Manual –
EcoSensor product lines

Number	Function	Description
1	Temperature/Humidity/Dew Point sensor	Temperature/Humidity sensor coming with IP67 sensor filter
2	ON/OFF	ON/OFF Reed Switch. Activated using a magnet. (waiting time : 2 seconds) If the “ Network LED ” illuminates in GREEN color, the BeanDevice® is powered on. If the “ Network LED ” illuminates in RED color, the BeanDevice® is powered off.
3	Sensor/Activity LED	Bi-color led light, either displays in GREEN or RED color depending up on the status of the device See Led Description table
4	Network LED	Bi-color led light for network status, GREEN or RED depending upon the status of the network. See Led Description table
5	Antenna	2.2 dBi omnidirectional antenna See antenna description section
6	Network	“ Network ” non-contact button restores the factory settings on the BeanDevice®. Point the pole of the Neodymium magnet that was provided with your BeanDevice® towards the “ Network ” label circle. Hold the magnet for approximately 2s Please read the following section for more information “click here”
7	Eyelet	Eyelet for screw mounting



7.7.2 Led description

This table shows the led description depending on the BeanDevice® status:

<i>BeanDevice® status</i>	<i>Leds Description</i>
The BeanDevice® is power on	Network Led flashes one time in GREEN
The BeanDevice® is power off	Network Led flashes one time in RED
The BeanDevice® starts successfully a Network association	Network Led flashes slowly in GREEN
The BeanDevice® transmits a data to the BeanGateway®	Network Led flashes fastly in GREEN
The BeanDevice® fails to start a Network association	Network Led flashes one time in RED and then restart flashing in GREEN for a new Network association
The BeanDevice® fails to transmit a data to the BeanGateway®	Network Led flashes fastly in RED
Data acquisition and/or data logging are correctly performed on the BeanDevice®	Sensor activity Led flashes one time in GREEN
Data acquisition and/or data logging fails	Sensor activity Led flashes one time in RED

7.7.3 Enclosure mechanical drawing

Material type	PUR (Polycarbonate)
Enclosure size (w/o external sensor & antenna) in mm LxIxH	110 x 30 x 34
Impact EN 50 102	IK 08
Protection	IP67



7.7.3.1 BeanDevice® ONE-T

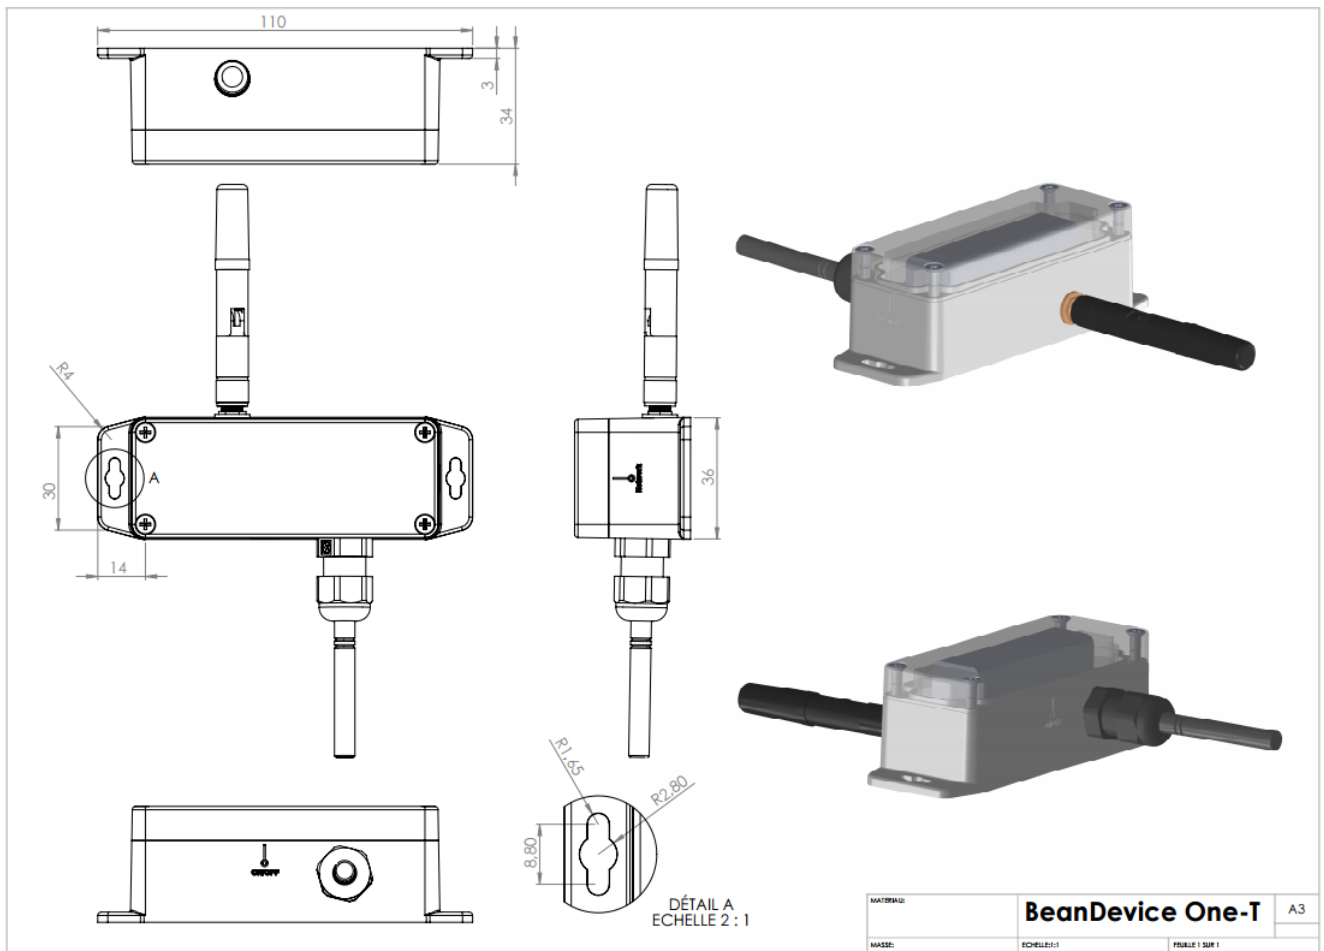


Figure 9: BeanDevice® ONE-T Mechanical drawing



7.7.3.2 BeanDevice® ONE-TH, ONE-TIR, ONE-BN

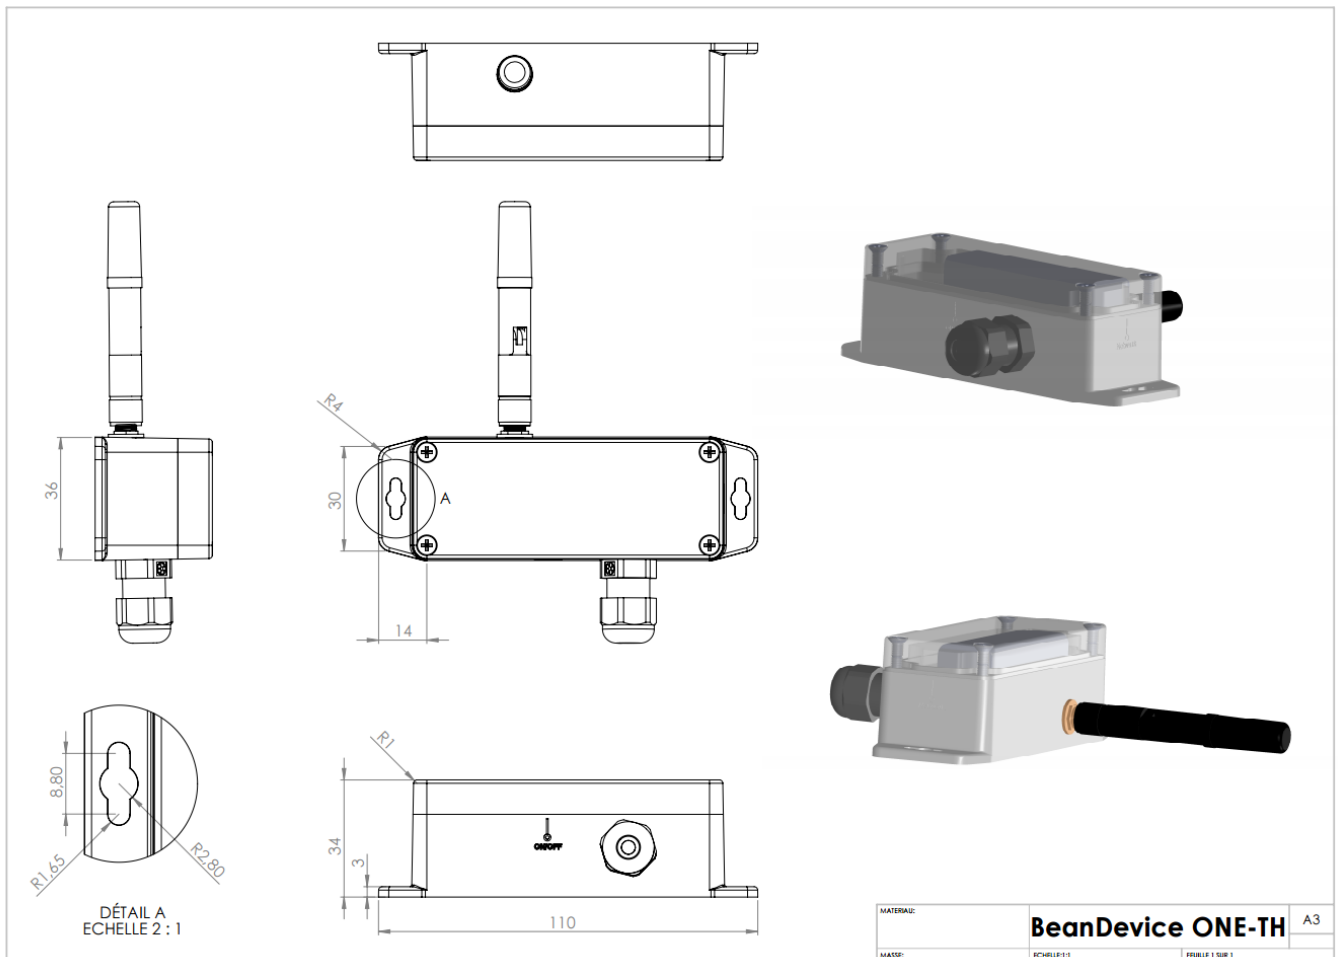


Figure 10 : BeanDevice® ONE-TH/ONE-TIR/ONE-BN Mechanical drawing



7.7.4 Antenna specifications

The BeanDevice® EcoSensor range comes with an external omnidirectional antenna.



Figure 11 : Omnidirectional 2.2dBi Antenna

RF Properties	Value	Unit	Tol.
Frequency range	2400 ... 2500	MHz	
VSWR	1.5		max
Impedance	50	Ω	
Peak Gain	2.8	dBi	Typ.
Average Gain	2.2	dBi	Typ.

Table 1 : Antenna Specifications table

During BeanDevice® installation, test several orientation of the antenna in order to get best wireless link quality.

Check the LQI (Link Quality Indicator) of your BeanDevice® for being sure that your antenna is right oriented.



For further information, read the application note: [AN RF 007 : “ Beanair WSN Deployment ”](#)



7.8 BEANDEVICE® POWER SUPPLY

The BeanDevice® ONE-XX is power supplied by a Lithium-thionyl chloride primary cell with a very low leakage current (less than 2%/year)



A primary cell is not a rechargeable battery, don't try to recharge it. You will damage your primary cell and your BeanDevice®.

Primary cell technology	LiSOCl ₂ (Lithium -thionyl chloride)
Nominal Voltage	3,6V
Nominal capacity	1800 mAh
Size	14.5*33.5mm (AA)
Maximum continuous current	500mA
Maximum pulse current	1A
Type	ER14505M

Table 2 : Primary cell specifications table

List of LiSOCl₂ primary cell manufacturer:

Manufacturer	Product Reference
EEMB	ER14505M
BIPOWER CORP	
EVE	
Ultralife	



Important Precautions to follow:

- ✓ ***Lithium-thionyl chloride primary cell with a size of AA must be used. Don't try to use another primary cell technology, you will damage your BeanDevice® ;***
- ✓ ***Use only the ER14505M battery type with the “M” extension for high power management;***
- ✓ ***Primary cell is not a rechargeable battery. Don't try to recharge a primary cell; you will damage your BeanDevice®.***



8. BEANDEVICE® INSTALLATION GUIDELINE

8.1 POWERING ON YOUR BEANDEVICE® ONE-XX

The BeanDevice® ONE-XX includes a reed switch that allows switching ON or OFF the wireless sensor. The device could be powered ON by hovering the magnet on the ON-OFF label.

This technology allows you to power on your BeanDevice® instantly and without any physical contact between the magnet and the BeanDevice® enclosure.


Powering ON your BeanDevice® ONE-XX is very simple:

1. Please make sure that your **BeanDevice® ONE-XX** is provided with a magnet (the magnet is provided in another box separated from the BeanDevice®)



2. As shown in the picture below, hover your magnet slowly above the ON-OFF label for about 2 seconds, your BeanDevice® turns on automatically. The LED light illuminates **GREEN**. You can hold your magnet position diagonally or in parallel to your device label.



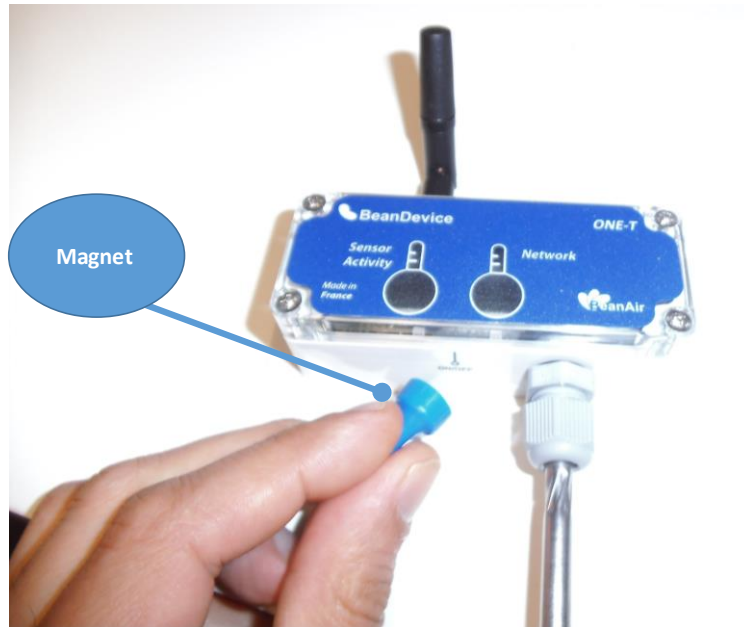

3. Repeat the same process to Power OFF your BeanDevice®. The LED illuminates in RED. Your BeanScape will specify that the device is no longer active.

8.2 PRIMARY CELL REPLACEMENT


Located inside the BeanDevice® enclosure, the primary cell provides the BeanDevice® power supply. The self-discharge rate is very low on a primary cell (2% / year).

The BeanScape® displays the battery charge level, if it is in low state you will need to change the battery as follows.

Step n°1: Open the
BeanDevice® casing


- Power down your BeanDevice®
- Use a Philips screwdriver with the right size
- Unscrew the cover

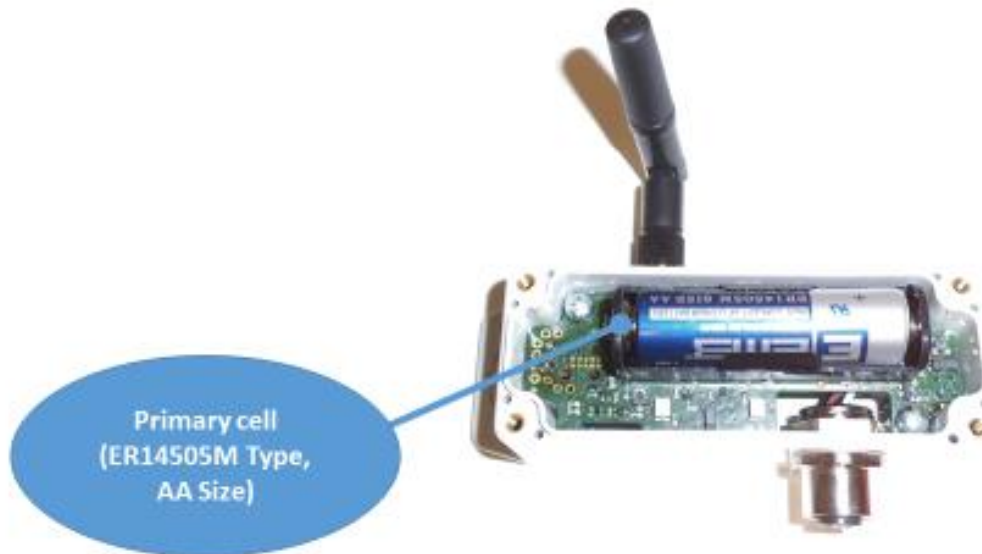

**Step n°2: Primary cell replacement**

- Remove the primary cell from the battery holder
- Replace the primary cell. Follow the electrical polarity on the battery holder(see picture)
- Close the cover



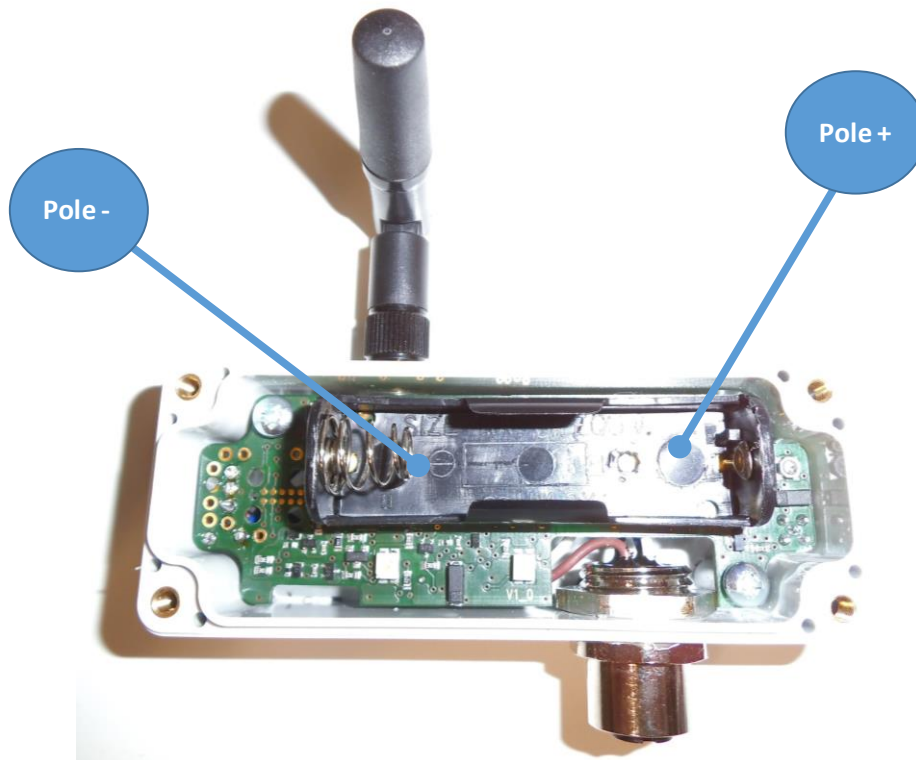

8.3 BEANDEVICE® ONE-BN – WIRING CODE

The BeanDevice® ONE-BN comes with a M12-4Pins Socket. This socket is watertight IP67, the user should use a M12-4Pins plug coming with IP67 Rating.




M12 Socket




The wiring code is described in the following drawing:

Wiring code – M12 Socket side

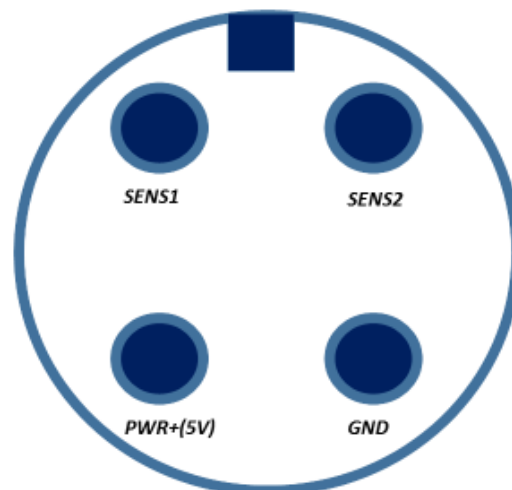

<i>Signal</i>	<i>Description</i>	<i>M12 Pin Number</i>
<i>Sens1</i>	Digital input signal 1	<i>PIN2</i>
<i>Sens2</i>	Digital input signal 2	<i>PIN1</i>
<i>PWR+</i>	Sensor power supply (5V). A maximum current could be to an external sensor is 25mA	<i>PIN3</i>
<i>Gnd</i>	Ground	<i>PIN4</i>

Wiring code – M12 Plug side

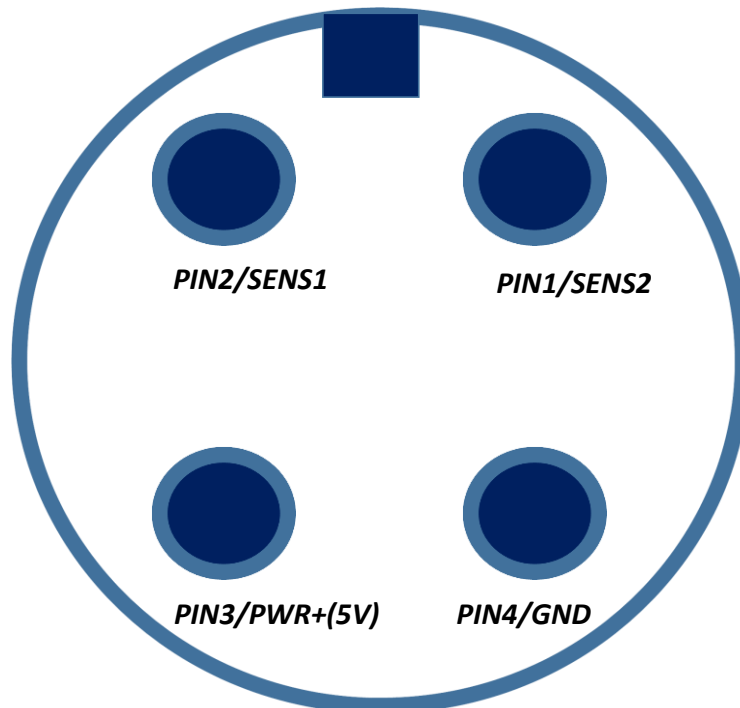

8.4 BEANDEVICE® NETWORK ASSOCIATION



Please read the technical note [TN_RF_006 – "WSN Association process"](#)

8.5 DATALOGGER FEATURE



Please read the technical note [TN_RF_007 – "BeanDevice® DataLogger User Guide"](#)

8.6 OTAC (OVER-THE-AIR-CONFIGURATION) PROCESS



Please read the technical note [TN_RF_010 – « BeanDevice® Power Management »](#)

8.7 COEXISTENCE WITH OTHERS FREQUENCIES AT 2.4 GHZ

The BeanDevice® is sensitive to noise 2.4GHz (Wi-Fi as a source for example), but many protections are already in place, particularly in the IEEE 802.15.4®.

It should however be careful when installing the product, check all the possibilities of radio channels on the frequency range 2.4-2.5GHz. The operation of the product will be improved.



For further information, read the application note: [TN_RF_011 – "Coexistence of Beanair WSN at 2.4GHz"](#)



8.8 OPERATING TEMPERATURE

The table below shows the BeanDevice® operating temperature:

Operating temperature
-45 ° C to +75 ° C

BeanDevice® can operate in an area with 90% humidity.

However, the wireless range can be reduced in the presence of water. Avoid mounting the BeanDevice® in an enclosure surrounded by water, or near bushy plants (plants are composed of 90% water),...

8.9 MECHANICAL MOUNTING

The BeanDevice® ONE-XX enclosure can be easily mounted to the wall through 2 mounting holes provided on the back of the box.

The diameters of these holes are 4.2mm respectively.



8.1 FACTORY SETTINGS

If desired, the user can perform a Network context deletion. It allows to restore default parameters on the BeanDevice®:

Parameter	BeanDevice® version			
	ONE-TH	ONE-T	ONE-TIR	ONE-TIR
Power Mode	Sleep with Network listening			
Data Acquisition duty cycle	10s			
Data Acquisition mode	LowDutyCycle			
TX Power	+18dBm			

To restore these defaults parameters, you must perform a **Network context deletion**. The “**Network**” non-contact button is outside the product. Hold the magnet on the button network (“Network”) for more than 2 seconds.





9. BEANDEVICE® SUPERVISION FROM THE BEANSCOPE



Don't hesitate to read the BeanScope® user manual for further information about the BeanScope®

9.1 STARTING THE BEANSCOPE®

The BeanScope® is a supervision software monitor fully dedicated to Beanair WSN (Wireless Sensor Networks):


- ✓ Start the BeanScope® by double-clicking on the BeanScope™ icon 
- ✓ Click on the button « start » 
- ✓ All the BeanDevice® operating on the WSN will appear on the left window
- ✓ Select the BeanDevice® you want to configure.




The screenshot shows the BeanScope interface. On the left, a list of BeanDevice profiles is displayed. One profile is selected, and its configuration is shown in the main window. The configuration includes various sensor parameters and their status. A callout box points to the MAC_ID field, which is highlighted in red, and another callout box points to the sensor channel profiles, which are listed below the MAC_ID field.

The User interface is structured as follow:

- ✓ **Green text on black background:** displays the current status information




- ✓ **Black text on white background:** device settings



"BeanDevice® System Profile" frame is composed of two parts:

- ✓ Status information;
- ✓ Main settings;

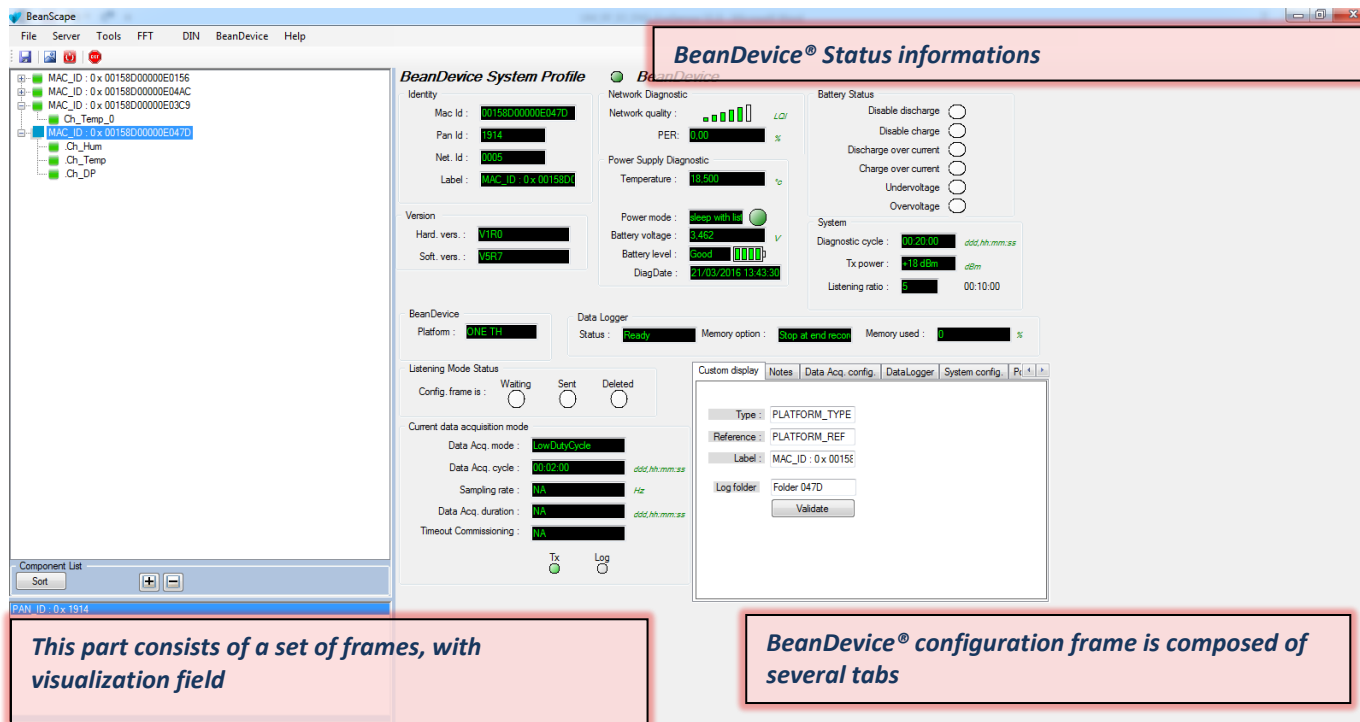

The screenshot displays the BeanScape software interface. The main window is titled "BeanDevice® Status informations". It is divided into several sections:

- BeanDevice System Profile:** This section contains fields for Identity (Mac Id, Pan Id, Net. Id, Label), Version (Hard. vers., Soft. vers.), and BeanDevice Platform (ONE TH).
- Network Diagnostic:** Shows Network quality (LCI) and PER (0.00 %).
- Power Supply Diagnostic:** Shows Temperature (18.500 °C), Power mode (sleep with hi), Battery voltage (0.462 V), Battery level (Good), and DiagDate (21/03/2016 12:42:00).
- Battery Status:** Includes checkboxes for Disable discharge, Discharge over current, Charge over current, Undervoltage, and Overvoltage.
- System:** Shows Diagnostic cycle (1:20:00), Tx power (+16 dBm), and Listening ratio (5).
- Data Logger:** Shows Status (Ready) and Memory option (Stop at end record).
- Listening Mode Status:** Includes Config. frame is (Waiting, Sent, Deleted) and Current data acquisition mode (Data Acq. mode, cycle, Sampling rate, duration, Timeout Commissioning).
- Custom display:** A tabbed interface with fields for Type, Reference, Label, and Log folder.

Two callout boxes are present:


- A box on the left states: "This part consists of a set of frames, with visualization field".
- A box on the right states: "BeanDevice® configuration frame is composed of several tabs".



9.2 BEANDEVICE® STATUS INFORMATION

You will find below a description of the data information fields for each frame.

9.2.1 Frame: Identity

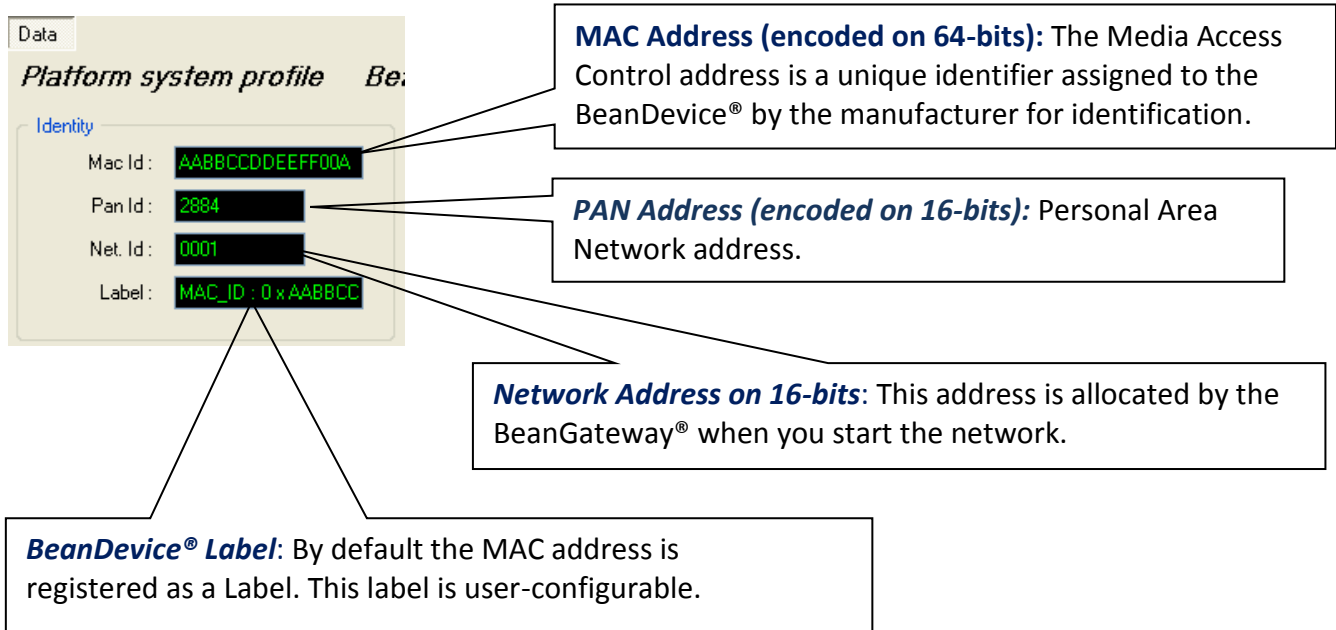

The screenshot shows a data frame titled "Platform system profile" with an "Identity" section. The fields are:

- Mac Id: AABBCCDDEEFF00A
- Pan Id: 2884
- Net. Id: 0001
- Label: MAC_ID : 0 x AABBC

Callouts provide the following definitions:

- MAC Address (encoded on 64-bits):** The Media Access Control address is a unique identifier assigned to the BeanDevice® by the manufacturer for identification.
- PAN Address (encoded on 16-bits):** Personal Area Network address.
- Network Address on 16-bits:** This address is allocated by the BeanGateway® when you start the network.
- BeanDevice® Label:** By default the MAC address is registered as a Label. This label is user-configurable.




How PAN ID is assigned ?


The BeanGateway® starts the WSN, assigning a PAN ID (Personal Area Network identifier) to the network. The PAN ID is pre-determined and cannot be modified. If several WSN are used, before deploying your BeanDevice® check to which BeanGateway® is assigned your BeanDevice®.



9.2.2 Frame : Wireless Network Diagnostic

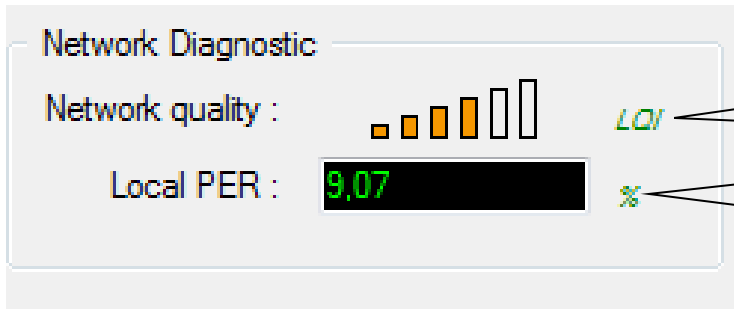

Network Diagnostic

Network quality :  LQI


Local PER : 9,07 %

LQI: Link quality indicator of the BeanDevice® (0 to 255).

Local Packet error rate (PER): represents the PER between the BeanGateway® and the BeanDevice®


$$PER = \text{Number of lost packet} / \text{Total of packet transmitted}$$

9.2.3 Frame : Power Supply diagnostic

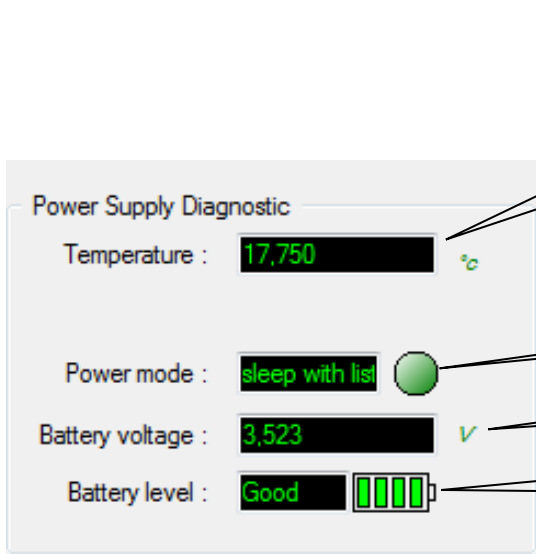


Power Supply Diagnostic

Temperature : 17,750 °C

Power mode : sleep with lisi 

Battery voltage : 3,523 V

Battery level : Good 

Internal temperature

This colored led indicates the BeanDevice power mode status. See below for more

Battery voltage (unit V)

Battery level, three values: Good, Medium and Low




If the battery level is low, it is highly recommended to change your primary cell.




9.2.3.1 BeanDevice® Power Mode status

Power Supply Diagnostic

Temperature : 16,500 °C

Power mode : down 


Battery voltage : 3,542 V

Battery level : Good 


BLUE LED: The BeanDevice® is power off

Power Supply Diagnostic

Temperature : 17,625 °C

Power mode : sleep with list 

Battery voltage : 3,489 V


Battery level : Good 

GREEN LED: The BeanDevice® is in sleeping with network listening power mode


Sleeping with network listening power mode is displayed

Power Supply Diagnostic

Temperature : 18,000 °C

Power mode : sleep mode 

Battery voltage : 3,464 V

Battery level : Good 


DiagDate : 21/03/2016 13:52:24

GREEN LED: The BeanDevice® is in active sleeping power mode

Sleeping power mode is displayed



9.2.4 Frame : System

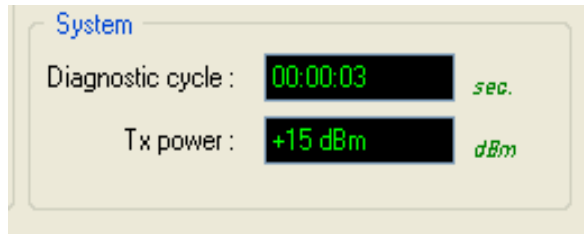


Diagnostic cycle in seconds (battery charge status, internal temperature, LQI, PER...).

Radio TX Power in dBm

9.3 FRAME : BEANDEVICE®

According to the BeanDevice® version, the information displayed in the frame will not be the same. For example (BeanDevice® ONE-BN):

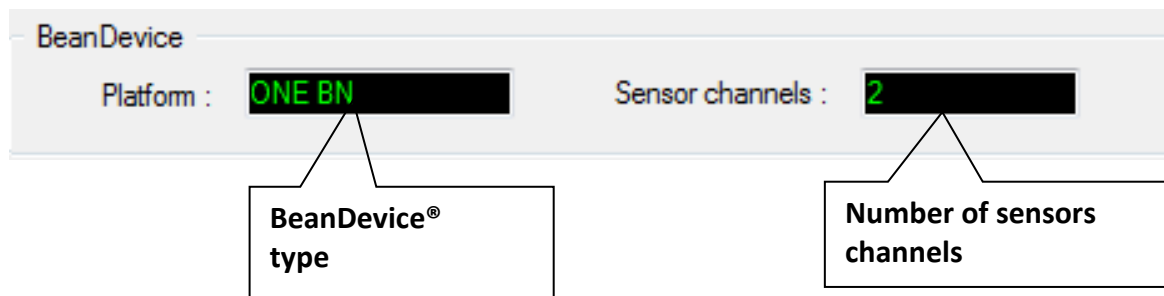

9.3.1 Frame : Product Version



Hardware version: BeanDevice® hardware

Software version: BeanDevice® embedded software version

V (version) related to a major modification of the embedded software.

R (Release) related to a minor modification of the embedded software






These ID versions should be transmitted to our technical support center when you encountered a material or software dysfunction.

9.3.2 Frame : Current Data Acquisition mode

This frame displays the current data acquisition mode :

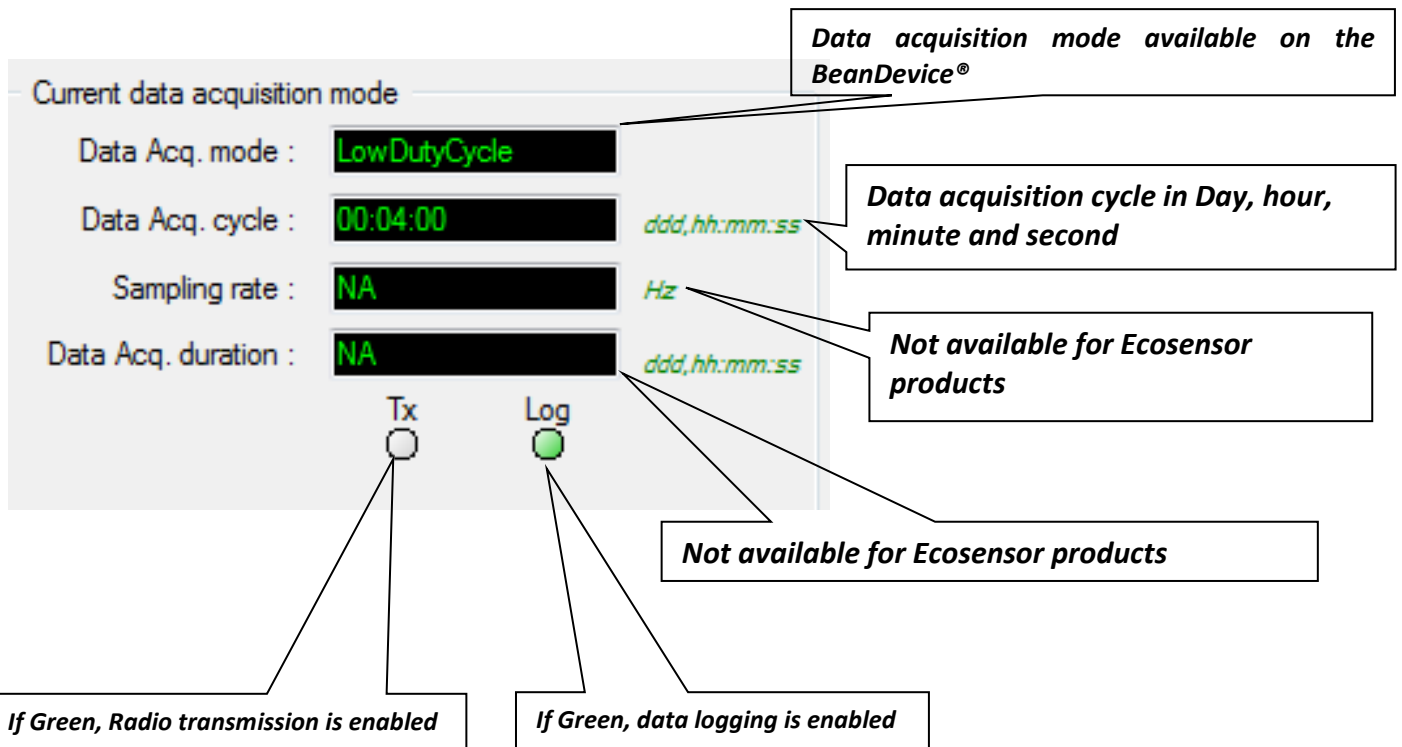

The screenshot shows the 'Current data acquisition mode' frame with the following fields and callouts:

- Data Acq. mode :** **LowDutyCycle** (Callout: *Data acquisition mode available on the BeanDevice®*)
- Data Acq. cycle :** **00:04:00** (Callout: *ddd, hh:mm:ss* and *Data acquisition cycle in Day, hour, minute and second*)
- Sampling rate :** **NA** (Callout: *Hz*)
- Data Acq. duration :** **NA** (Callout: *ddd, hh:mm:ss* and *Not available for Ecosensor products*)

Below the fields are two indicators:

- Tx** (Radio transmission indicator): *If Green, Radio transmission is enabled*
- Log** (Data logging indicator): *If Green, data logging is enabled*


Additional callouts for the 'NA' values:

- Sampling rate: *Not available for Ecosensor products*
- Data Acq. duration: *Not available for Ecosensor products*




9.4 MAIN SETTINGS

Select the BeanDevice® which should be configured

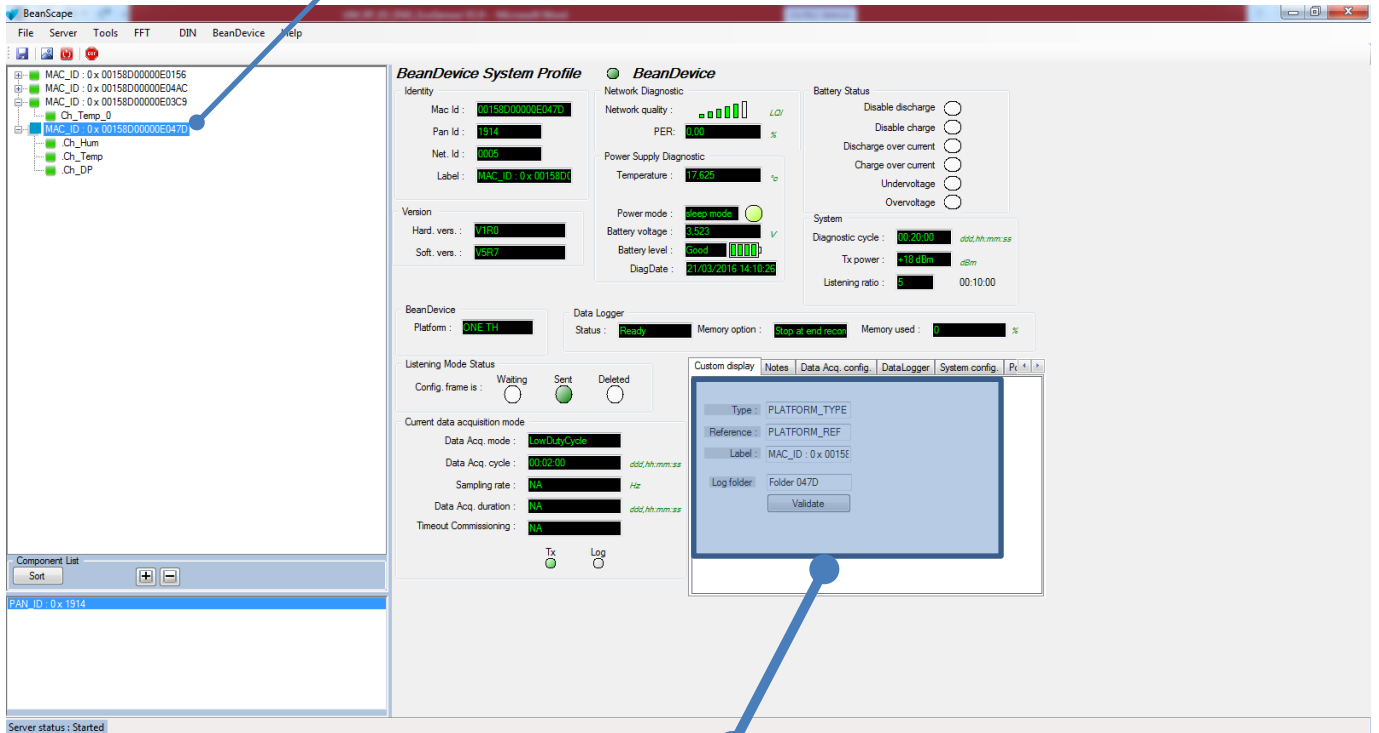

The screenshot shows the BeanScope software interface. On the left, a tree view lists several BeanDevice instances with their MAC IDs. One instance, 'MAC_ID : 0x00158D000000E047D', is selected. The main area displays the 'BeanDevice System Profile' for this device, including fields for Identity (Mac Id, Pan Id, Net. Id, Label), Version (Hard. vers., Soft. vers.), Network Diagnostic (Network quality, PER), Power Supply Diagnostic (Temperature, Power mode, Battery voltage, Battery level, DiagDate), Battery Status (Disable discharge, Disable charge, Discharge over current, Charge over current, Undervoltage, Overvoltage), System (Diagnostic cycle, Tx power, Listening ratio), BeanDevice (Platform), Data Logger (Status, Memory option, Memory used), Listening Mode Status (Waiting, Sent, Deleted), and Current data acquisition mode (Data Acq. mode, Data Acq. cycle, Sampling rate, Data Acq. duration, Timeout Commissioning). A 'Custom display' dialog box is open, showing fields for Type (PLATFORM_TYPE), Reference (PLATFORM_REF), and Label (MAC_ID : 0x00158D), along with a 'Log folder' field and a 'Validate' button.

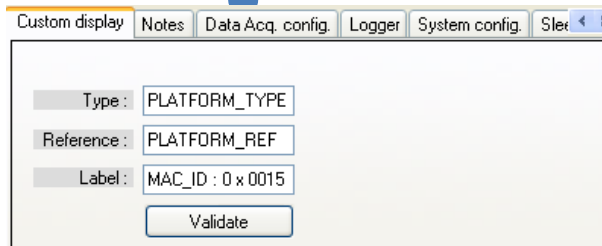

This is a close-up of the 'Custom display' dialog box. It contains the following fields and controls:

- Type: PLATFORM_TYPE
- Reference: PLATFORM_REF
- Label: MAC_ID : 0x00158D
- Log folder: Folder 047D
- Validate button






This frame is composed of several Tabs and includes BeanDevice® OTAC (Over the Air Configuration) Parameters:

Tab	Description
Custom Display	Customize the BeanDevice® label
Notes	This area contains the notes related to the BeanDevice®.
Data acquisition mode configuration	Configure the data acquisition mode , set the acquisition cycle, enable/disable the data logger function.
Data logger	Data logger function on the BeanDevice®
System configuration	Diagnostic cycle and the TX Power
Power Mode Management	Configure the Power Mode (Sleep, Sleep with network listening)

9.4.1 Tab : Custom Display

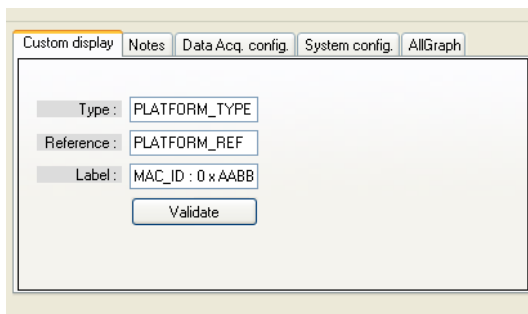


Parameter	Description
Type	Enter here the type of BeanDevice® you want to use
Reference	Assign an internal reference to the BeanDevice®
Label	Assign any sort of Label to your BeanDevice®. Therefore, the user can easily associate the BeanDevice® with its equipment (example: Room_N521_Second_Floor)

Then click on “*Validate*” to confirm these new settings.



9.4.2 Tab: Notes

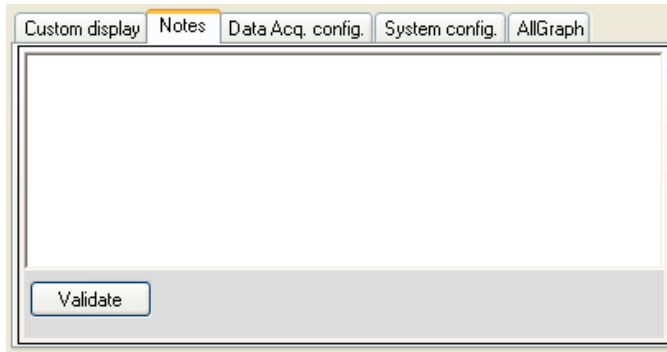


This field contains the user notes related to the BeanDevice®.

To change this field, enter your text and click on « **Validate** » button. To back up your text, press the icon 

Example: Machine failure n°XX, requested intervention.

9.4.3 Tab: Data Acquisition configuration

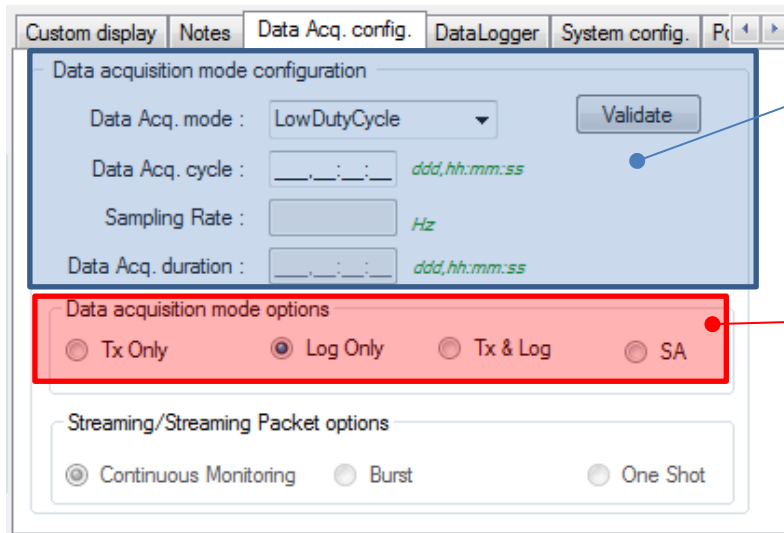

Data acquisition mode configuration

Datalogger options





Parameter	Different values	Description
Data Acquisition mode	Low duty cycle Data Acquisition (LDCDA)	Low duty cycle data acquisition is adapted for static measurement (tilt, pressure, temperature) requiring a low power consumption on your BeanDevice®. The duty cycle can be configured between 1 data acquisition & transmission per second to 1 data acquisition & transmission per day.
	Survey	Survey mode is a mix between the LDCDA mode and Alarm mode. A data acquisition is transmitted <ul style="list-style-type: none"> ▪ Whenever an alarm threshold (fixed by the user) is reached (4 alarm threshold levels High/Low). ▪ A transmission cycle is reached, the transmission cycle is configurable through the BeanScape® 1s to 24h ;
Data acquisition Cycle	Select the Data acquisition cycle between 1s and 24hours. The format is: Day : Hour : Minute :Second	
Sampling rate	Not available on Ecosensor product lines	
Data acquisition duration	Not available on Ecosensor product lines	



Options

Tx only: The BeanDevice® transmits the data acquisition without Datalogging

Log only: The BeanDevice® logs the data acquisition without wireless transmission

Tx & Log: The BeanDevice® transmits and logs the data acquisition;


SA: Standalone: The BeanDevice® logs the data acquisition without wireless transmission. The BeanDevice stores all the measurements on its embedded datalogger. Thus, a direct connection with the BeanGateway® is not needed.



For further information about the Datalogger, please read the technical note [TN_RF_007 – "BeanDevice® DataLogger User Guide"](#)



All the new modifications are displayed on “**Current data acquisition mode**” frame:

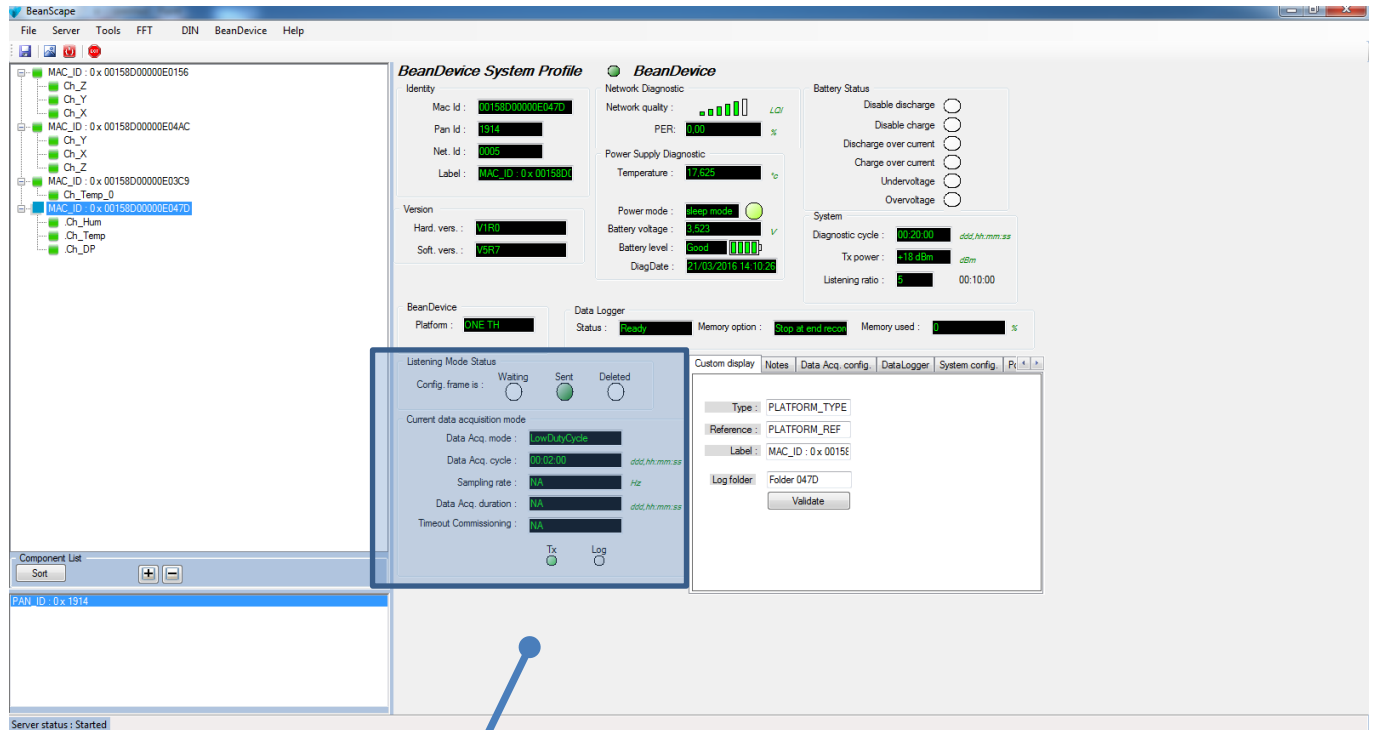

Current data acquisition mode

Data Acq. mode : **LowDutyCycle**

Data Acq. cycle : **00:01:00** *ddd, hh:mm:ss*

Sampling rate : **NA** *Hz*

Data Acq. duration : **NA** *ddd, hh:mm:ss*

Tx Log




9.4.4 Tab: DataLogger



Please read the technical note [TN_RF_007 – “BeanDevice® DataLogger User Guide”](#)

9.4.5 Tab : System config.

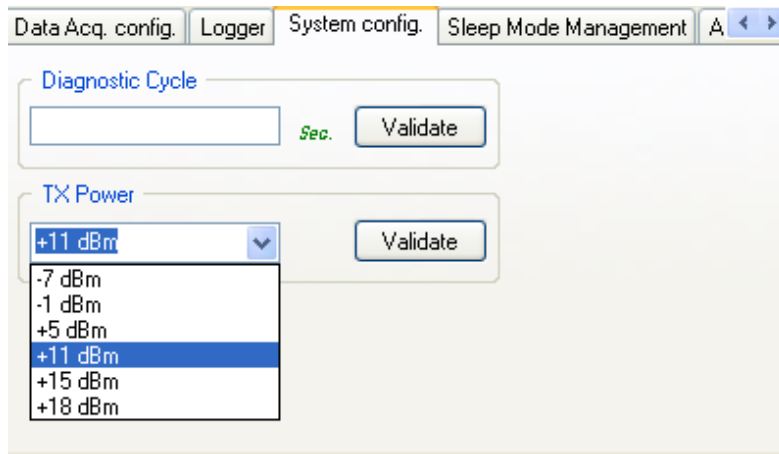


Parameter	Description
Diagnostic cycle	You can set the BeanDevice® diagnostic cycle (Battery status, LQI, PER ...). The Diagnostic cycle is modulo the data acquisition cycle. <i>Ex:</i> If you try to set the diagnostic cycle at 10s while the data acquisition cycle is set at 20s, the diagnostic cycle will be adjusted to 10s ;
TX Power	BeanDevice® TX Power unit is in dBm, it represents the power ratio in decibels (dB) of the measured power referenced to one milliwatt (mW). The antenna radio power is not included. If the BeanDevice® PER is high or the LQI is too low, try to increase the transmission power.



The following flow chart shows the effect of a higher TX power:



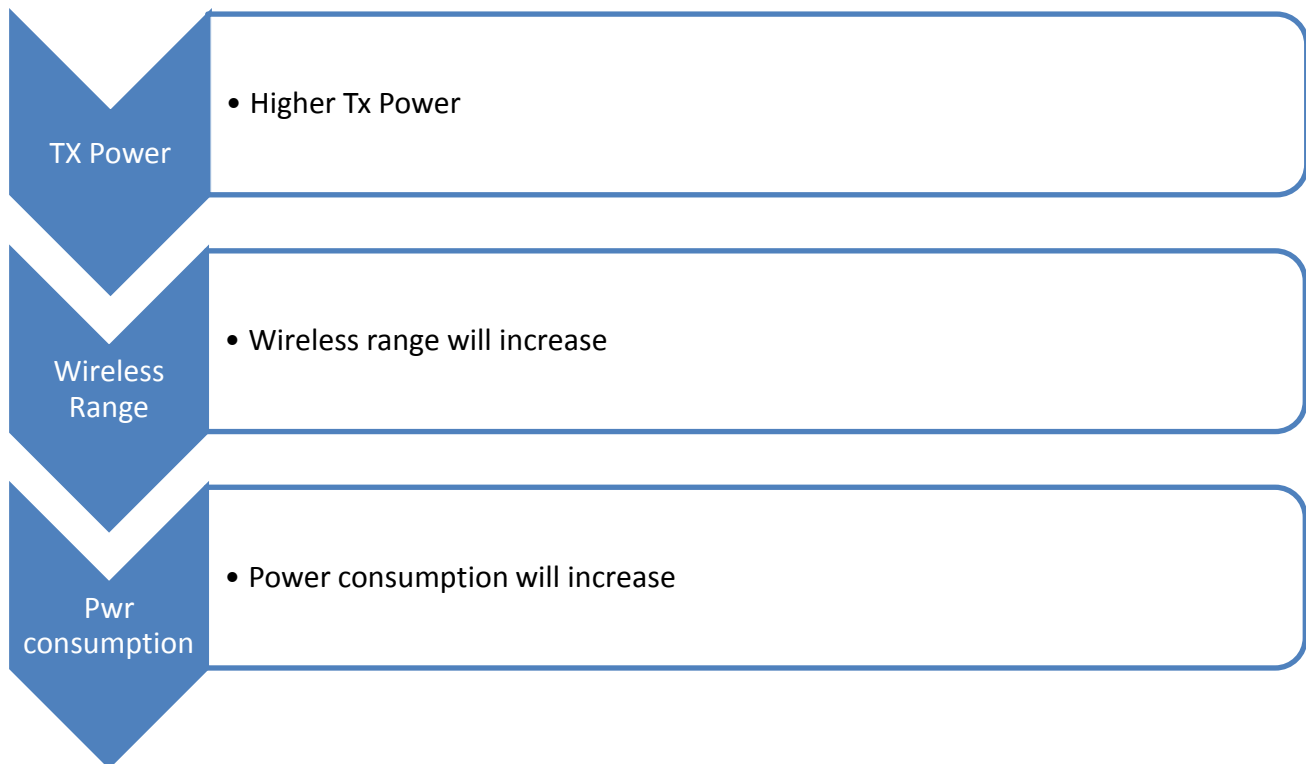

It is highly recommended to set the minimum RF power required for your applications.



If you set the TX power at its minimum value (-7dBm), and the wireless range is more than 5m, you will lose the radio link between your BeanGateway® and the BeanDevice®. To restore the network context with a maximum RF Power:

- *By pressing the Network push button for more than 2s, you can reset to factory settings (default RF power is fixed at its maximum: 18 dBm).*



How to convert dBm to mW

Zero dBm equals one milliwatt. A 3dB increase represents roughly doubling the power, which means that 3 dBm equals roughly 2 mW. For a 3 dB decrease, the power is reduced by about one half, making -3 dBm equal to about 0.5 milliwatt. To express an arbitrary power P as x dBm, or go in the other direction, the following equations may be used:

$$x = 10 \log_{10}(1000P)_{or}, x = 10 \log_{10} P + 30$$



and

$$P = 10^{(x/10)}/1000 \text{ or } P = 10^{(x-30)/10}$$

where P is the power in W and x is the power ratio in dBm.




Inside a building, the maximum authorized power is +12 dBm (antenna power included). It is highly recommended to follow the R&TTE guidelines. For more information, please visit <http://www.etsi.org>. It is your responsibility to carefully observe the R&TTE guidelines.

9.4.6 Tab : Sleep mode management

This Tab is composed of three frames:

- ✓ **Sleep mode configuration:** Configure the Power mode on your BeanDevice®
- ✓ **Listening Mode Status:** Describes the status of an OTAC (Over-the-air-Configuration)
- ✓ **Sleep mode with listening config. :** Configuration settings for Sleep mode with network listening

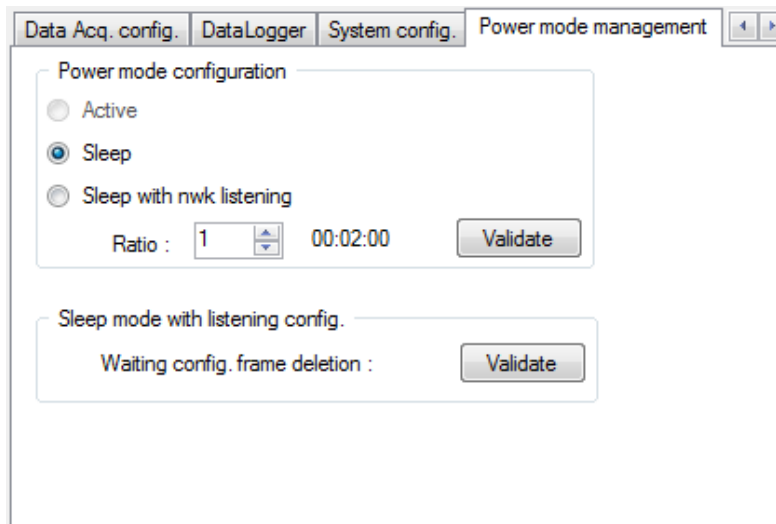

Parameter	Description
<i>Sleep mode configuration</i>	<p>Disabled: Sleeping mode is disabled. The BeanDevice® operates in Active power mode.</p> <p>Enabled: Sleeping mode is enabled</p> <p>Enabled with nwk listening: Sleeping with network listening mode is enabled.</p> <p>Ratio: Fix the Ratio of the listening cycle depending on the data acquisition low duty cycle.</p> <p>Example : If the data acquisition is 30 seconds, the Listening cycle will be 150 seconds.</p>
<i>Listening mode status</i>	<p>Ratio: displays the latest Ratio value</p> <p>Waiting: This led is green if an OTAC (Over-the-Air configuration) frame is pending for a transmission to the BeanDevice®</p> <p>Sent: This led is green if an OTAC (Over-the-Air configuration) frame is transmitted to the BeanDevice®.</p> <p>Deleted: This led is red if a pending OTAC (Over-the-Air configuration) is deleted</p>
<i>Sleep mode with listening config</i>	By clicking on “validate”, the pending OTAC frame is deleted



9.5 SENSOR CHANNEL PROFILE

The screen « Sensor profile » consists of three parts:

1


General information on the measurement channel;

2

Measurement channel configuration;

3

A graph which displays in real-time sensor signals during data acquisition;

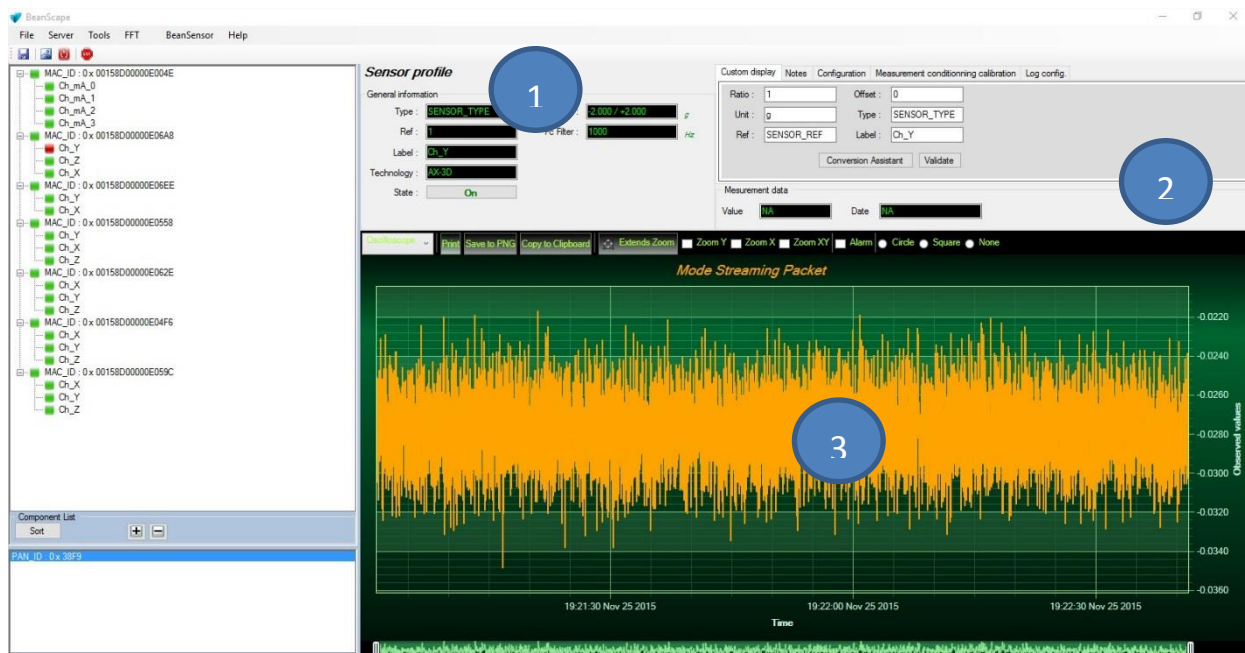


The screenshot shows the BeanScape software interface. The main window is titled "Sensor profile" and contains three distinct sections:

- Section 1 (General information):** Located at the top left, it includes fields for Type (SENSOR_TYPE), Ref (1), Label (Ch_Y), Technology (HX3D), and State (On). A blue circle with the number "1" is overlaid on this section.
- Section 2 (Measurement channel configuration):** Located at the top right, it includes fields for Ratio (1), Offset (0), Unit (g), Type (SENSOR_TYPE), Ref (SENSOR_REF), and Label (Ch_Y). A blue circle with the number "2" is overlaid on this section.
- Section 3 (Real-time graph):** Located at the bottom, it displays a graph of "Observed values" over "Time" (19:21:30 Nov 25 2015 to 19:22:30 Nov 25 2015). The graph shows a noisy signal with a blue circle containing the number "3" overlaid on it. A "Mode Streaming Packet" label is visible above the graph.



9.5.1 Sensor channel status

9.5.1.1 General information on Temperature sensor (available on the BeanDevice ONE-T only)

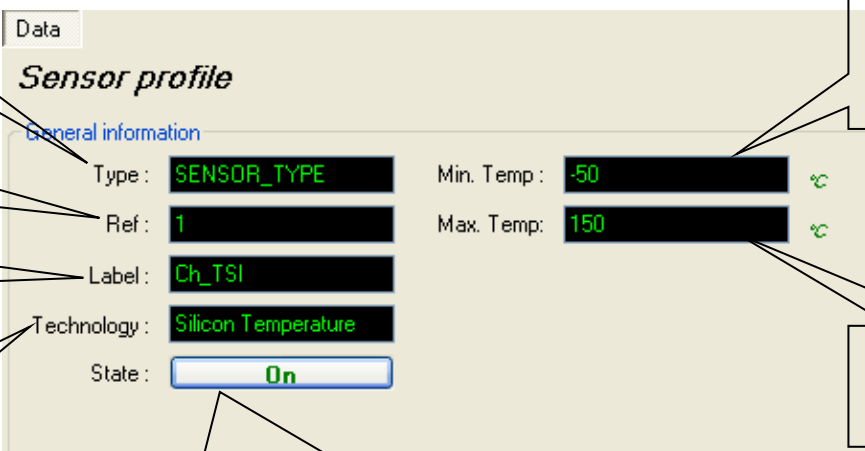

Sensor Type

Sensor Reference

Sensor label displayed on

Sensor technology

Sensor ON/OFF Button: enable/disable the sensor channel


Minimum Temperature value

Maximum Temperature value

Field	Value
Type	SENSOR_TYPE
Ref	1
Label	Ch_TSI
Technology	Silicon Temperature
State	On
Min. Temp	-50 °C
Max. Temp	150 °C

9.5.1.2 General information on IR temperature sensor (available on the BeanDevice® ONE-TIR only)

Ambient temperature

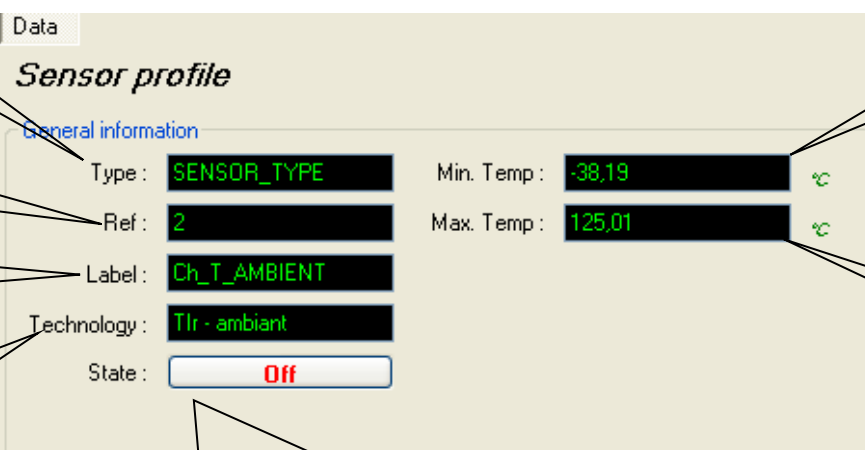

Sensor Type

Sensor Reference

Sensor label displayed on

Sensor technology

Sensor ON/OFF Button: enable/disable the sensor channel


Minimum Temperature value

Maximum Temperature value

Field	Value
Type	SENSOR_TYPE
Ref	2
Label	Ch_T_AMBIENT
Technology	Tlr - ambient
State	Off
Min. Temp	-38.19 °C
Max. Temp	125.01 °C



IR temperature

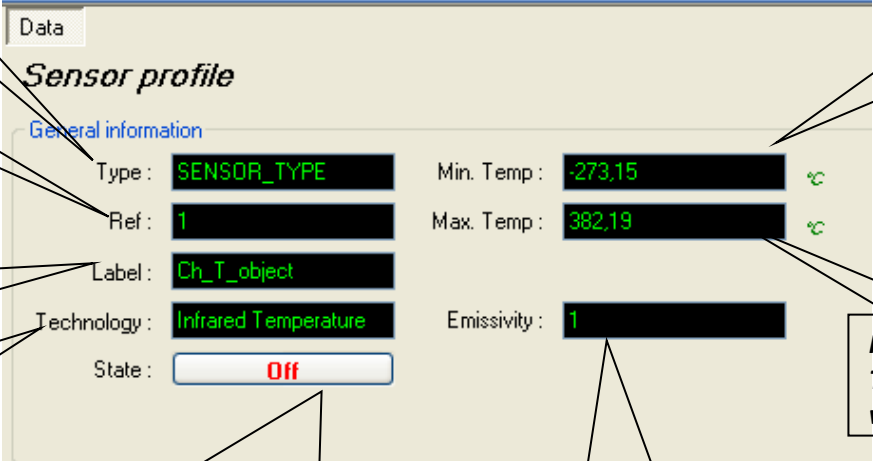

Sensor Type

Sensor Reference

Sensor label displayed on the

Sensor technology

Sensor ON/OFF Button: enable/disable the sensor channel

Minimum Temperature value

Maximum Temperature value

IR Emissivity coefficient


Field	Value
Type	SENSOR_TYPE
Ref	1
Label	Ch_T_object
Technology	Infrared Temperature
State	Off
Min. Temp	-273,15 °C
Max. Temp	382,19 °C
Emissivity	1

9.5.1.3 General information on binary input (available on the BeanDevice® ONE-BN only)



Please read the Technical note: [TN_RF_005 – "Pulse counter & binary data acquisition on the BeanDevice® ONE-BN"](#)

9.5.1.4 Frame: Measurement data

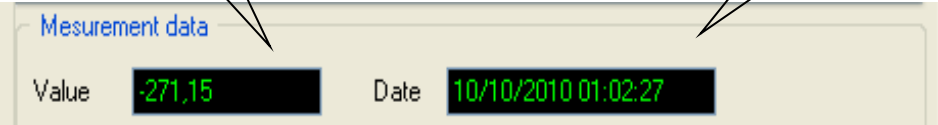

Measurement data value

Date and time of the latest measurement


Field	Value
Value	-271,15
Date	10/10/2010 01:02:27



By default, sensor unit format is


- **BeanDevice® ONE-T** : °C for the temperature sensor
- **BeanDevice® ONE-TIR** : °C for IR & ambient temperature sensors
- **BeanDevice® ONE-TH** : °C for the temperature sensor, %RH for humidity sensor
- **BeanDevice® ONE-BN** : Pulsecounter or binary 1/0 measurement for binary inputs

9.5.1.5 Frame : Alarm threshold

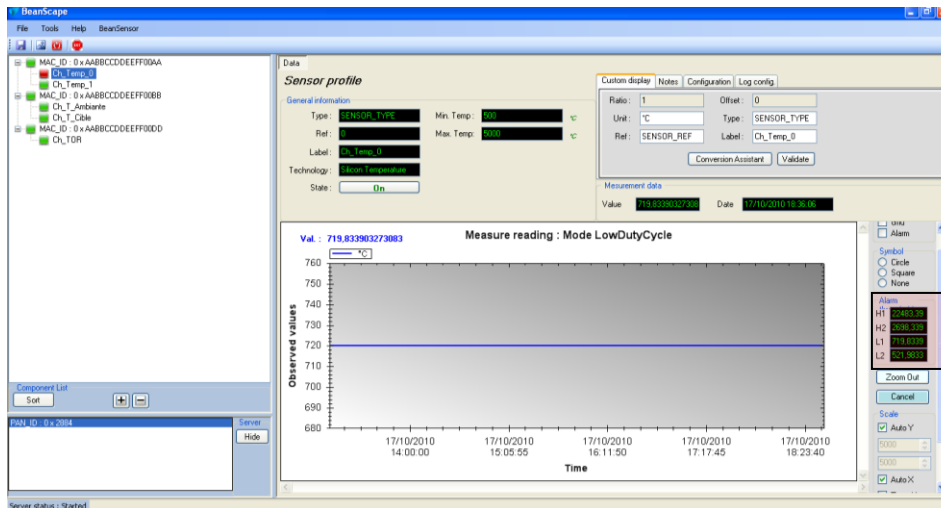

Alarm threshold frame

Alarm threshold are displayed in this frame:

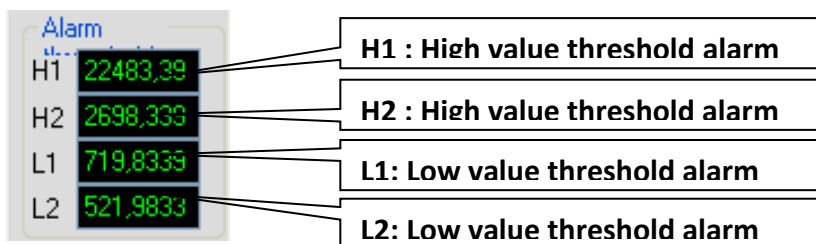

Depending on your sensor resolution, the displayed threshold value can differ from the reference value.




9.5.1 Sensor configuration & calibration frame

This frame contains a set of 5 tabs:

Custom Display	<ul style="list-style-type: none">• Allows the end user to customzie the sensor
Notes	<ul style="list-style-type: none">• Contains notes relating to the BeanDevice® sensor
Configuration	<ul style="list-style-type: none">• Sensor configuration interface. The user can configure the alarm thresholds related to the sensor• Depending on the BeanDevice® version which is used, other configuration parameters are available
Measurement conditioning & calibration	<ul style="list-style-type: none">• Sensor or measurement channel calibration
Log configuration	<ul style="list-style-type: none">• Logs configuration on the BeanScape®

9.5.1.1 Tab: Custom display

These parameters allow the user to customize his sensor:

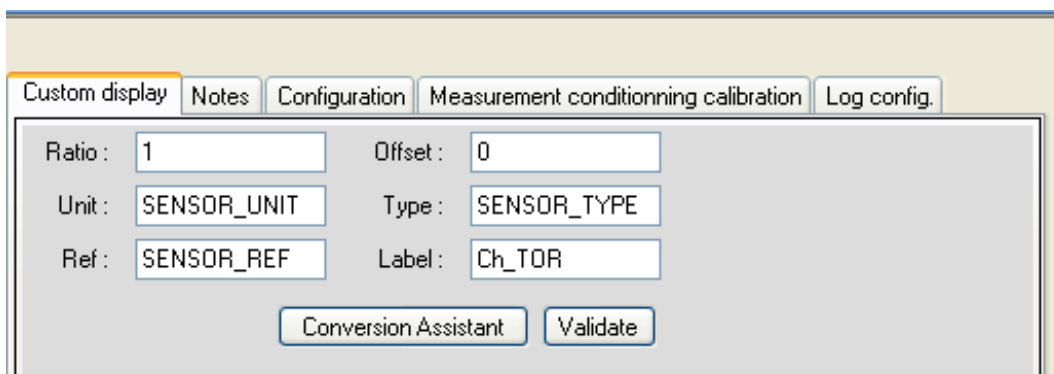

The screenshot shows a software interface with five tabs: Custom display, Notes, Configuration, Measurement conditioning calibration, and Log config. The Custom display tab is active and contains the following fields and buttons:

Ratio :	<input type="text" value="1"/>	Offset :	<input type="text" value="0"/>
Unit :	<input type="text" value="SENSOR_UNIT"/>	Type :	<input type="text" value="SENSOR_TYPE"/>
Ref :	<input type="text" value="SENSOR_REF"/>	Label :	<input type="text" value="Ch_TOR"/>

At the bottom of the form are two buttons: "Conversion Assistant" and "Validate".



- **Type:** Describe the sensor type (ex: load cell, pressure, Strain gage +/- 2 Mv/v, LVDT,....)
- **Unit:** customer sensor unit (bar, °C, l/h....)
- **Ratio :** Sensor Ratio coefficient (RAT);
- **Offset :** Sensor Offset Coefficient (OFF);
- **Label:** Give a name to your sensor. (ex : Sensor on Stator Machine 1, sensor in Room 2 Floor 3)

Measurement conversion formula:

$$\text{Converted Measurement} = \text{Measurement} \times \text{RAT} + \text{OFF}$$

Example with a temperature sensor: By default the temperature unit is in degree Celsius. The user wants to convert the unit of his temperature sensor in degree Fahrenheit.


$$\text{Converted Measurement}[^{\circ}\text{F}] = \text{Measurement}[^{\circ}\text{C}] \times \text{RAT} + \text{OFF}$$

With **RAT** = 1.8 and **OFF** = 32

Conversion assistant

To avoid conversion error, a conversion assistant is available to help you to setup quickly your measurement channel of your BeanDevice®.


Click on conversion assistant from the tab “Custom display”, a window will open allowing you to do a linear conversion.

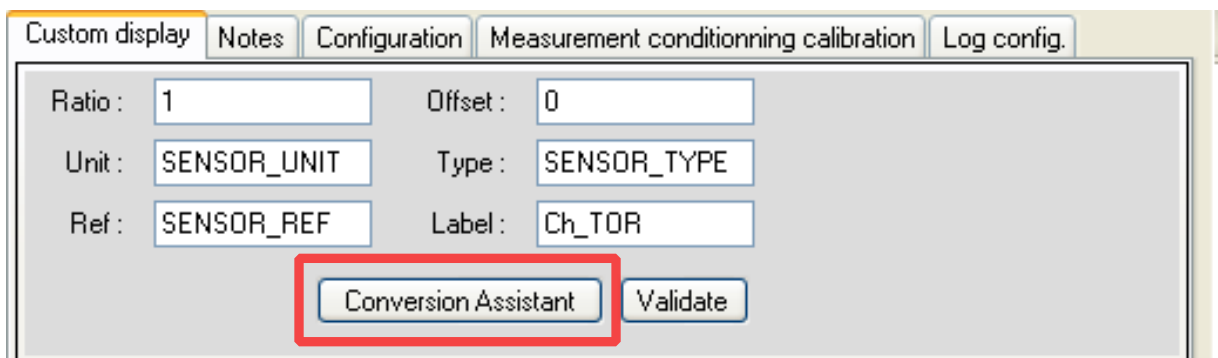

On the left column, the user can enter the non-converted measurement data. On the right column, the user can enter the converted measurement values with the desired unit.

The ratio and offset values are calculated automatically by the conversion assistant.



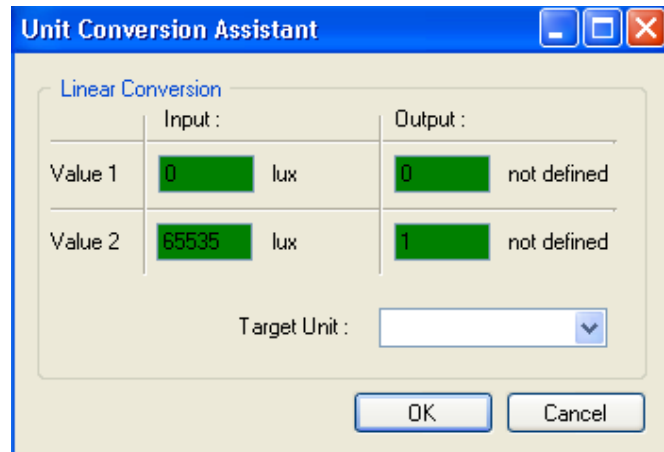

Unit Conversion Assistant


Linear Conversion

	Input :	Output :
Value 1	0 lux	0 not defined
Value 2	65535 lux	1 not defined

Target Unit :

OK Cancel

9.5.1.2 Tab : Notes

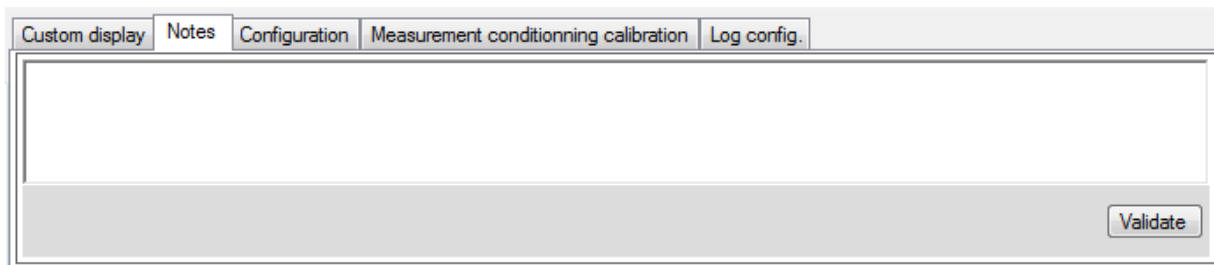


Custom display | **Notes** | Configuration | Measurement conditioning calibration | Log config.


Validate

This field contains notes relating to the BeanDevice® sensor. To change this field, enter a value or free text and click the **"Validate"** button.

A new window opens; accept your modifications by clicking on **"OK"**.

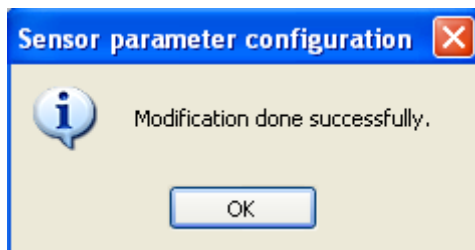

Sensor parameter configuration


 Modification done successfully.

OK

To backup your text click on the icon **"Backup your Database"**



9.5.1.3 Tab: Configuration

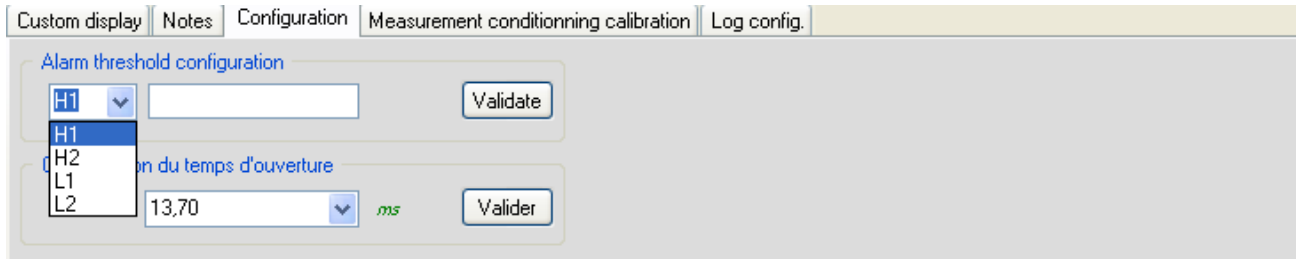

Alarm threshold

■ You can configure threshold high values (H1, H2) and low values (L1,L2) . In alarm mode, when a higher low threshold value is reached, an alarm notification is transmitted to the BeanGateway® ;


- ✓ If the sensor value is higher than H1/H2, an alarm notification is send to the BeanGateway®/BeanScape®;
- ✓ If the sensor value is lower than L1/L2, an alarm notification is send to the BeanGateway®/BeanScape®;.

Threshold values must be organized in this manner:

$$H2 \geq H1 > L1 \geq L2$$

9.5.1.4 Tab : Sensor & Analog conditioning calibration

These coefficients are used to calibrate the *external sensors (temperature, IR Temperature, Humidity....)* sensor.

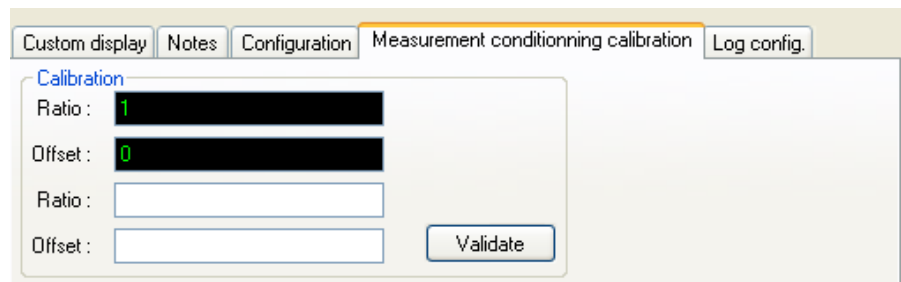

The BeanScape® provides a calibration interface for each measurement channel:

- **Ratio** : multiplier coefficient
- **Offset**: adder/subtracted coefficient. Its unit is the sensor unit.

$$\text{Calibrated_value} = (\text{Ratio} \times \text{Non_Calibrated_Value}) + \text{Offset}$$



Enter the calibration coefficients and then click on Validate.



The calibrations coefficients are backed up on the BeanDevice® flash memory and are conserved during the lifetime of your product.




WARNING: These calibration coefficients should be accessible to an advanced user. A wrong calibration will result in false measurements.

9.5.1.5 Tab : Log configuration



This tab should not be confused with the Datalogger function available on the BeanDevice®:

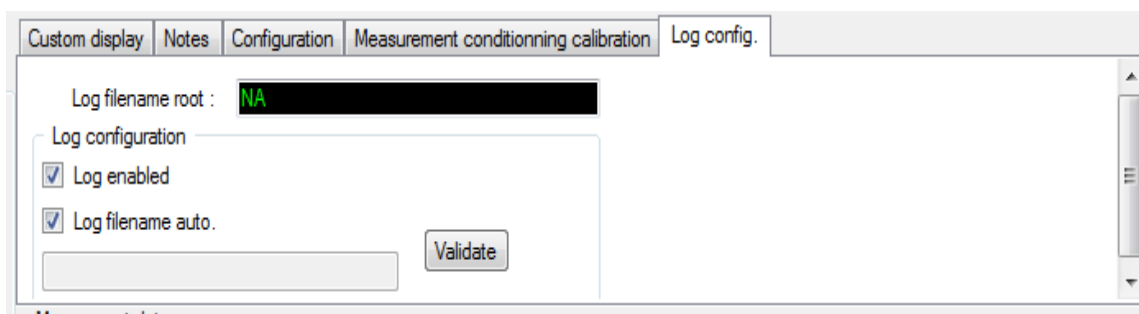

Custom display | Notes | Configuration | Measurement conditioning calibration | **Log config.**

Log filename root : **NA**

Log configuration

Log enabled

Log filename auto.

Validate

By default, Log file name is built with the measurement channel & BeanDevice® MAC Address:

< **Sensor Channel Number** > < **MAC_ID** >

- ✓ **Log enabled:** If checked, Log is enabled on the BeanScape®
- ✓ **Log filename auto.:** If checked, Log file name is named automatically

Click on **validate** in order to validate all your modifications.

For users who want to rename the log file, two solutions are provided:





“Rethinking sensing technology”

Document version : 1.10

Document type : User Manual

BeanDevice® User Manual –
EcoSensor product lines


Solution 1

Add automatically the channel “Label” in your log file name:
<Label><Sensor channel Number> <MAC_ID>

Solution 2

The log file name can be fully customized:
Uncheck the case « Log filename auto” and add your own label

9.5.2 Graphical display

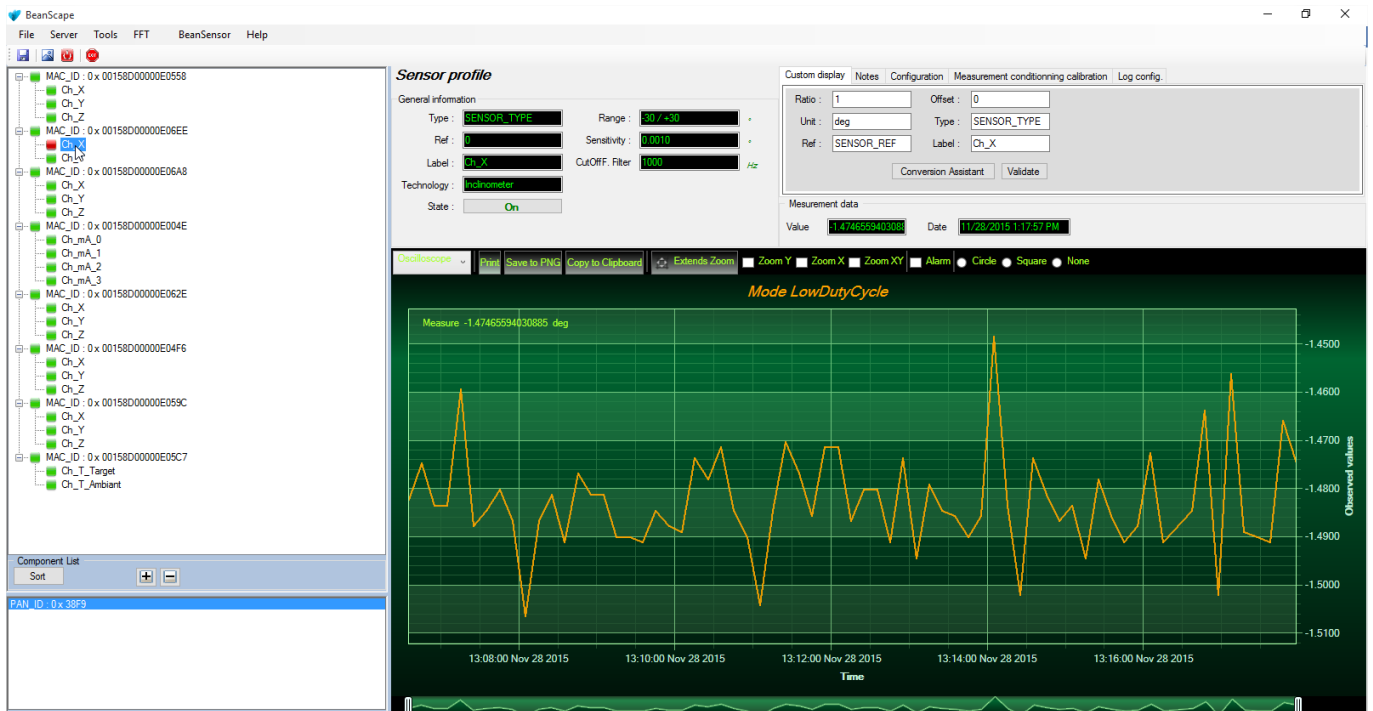

The chart is composed of two parts:


- ✓ **Part 1:** This is a preview window, allowing you to observe sensors acquisitions:
- ✓ **Part 2:** A strip on the side composed of different frames allows customizing the graph;



Please consider the environment before printing this document.

Page : 74 / 101


The graph has two axes:

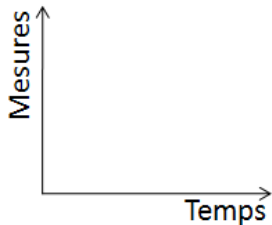


Axe-X: Timeline

Axis-Y: received sensor acquisitions

The BeanDevice® data acquisition mode and the last data acquisition can be visualized directly from the graph.

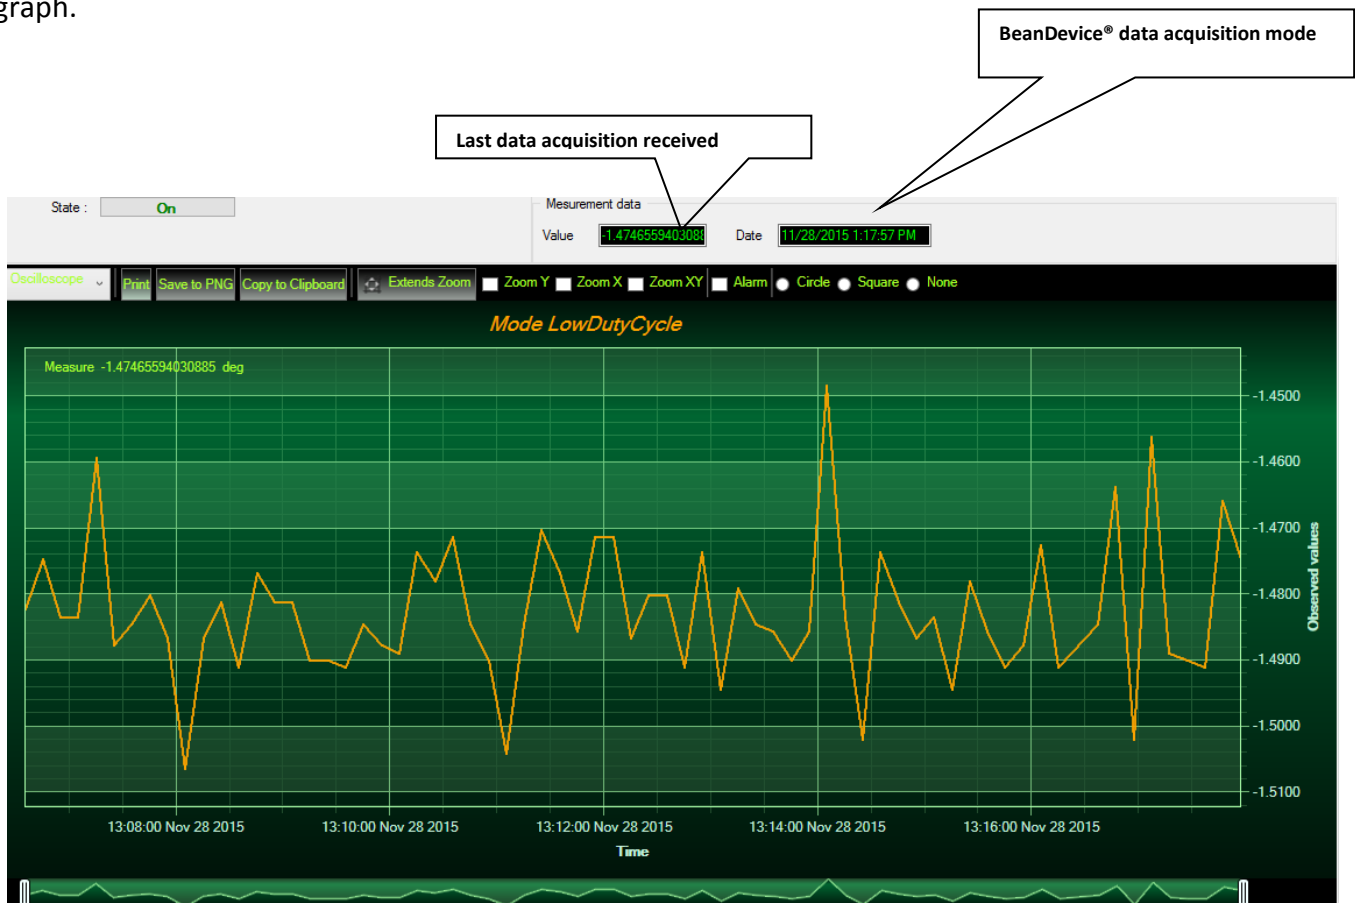


9.5.2.1 Frame: Display

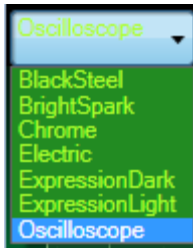

9.5.2.2 Frame: Symbols

From this frame you can select the display mode of action of the chart. Three types of symbols are available:




Circle: Brings up a point on each bar graph


Square: brings up a square on each measure of the graph

None: No logs is displayed on the graph


No symbol activated

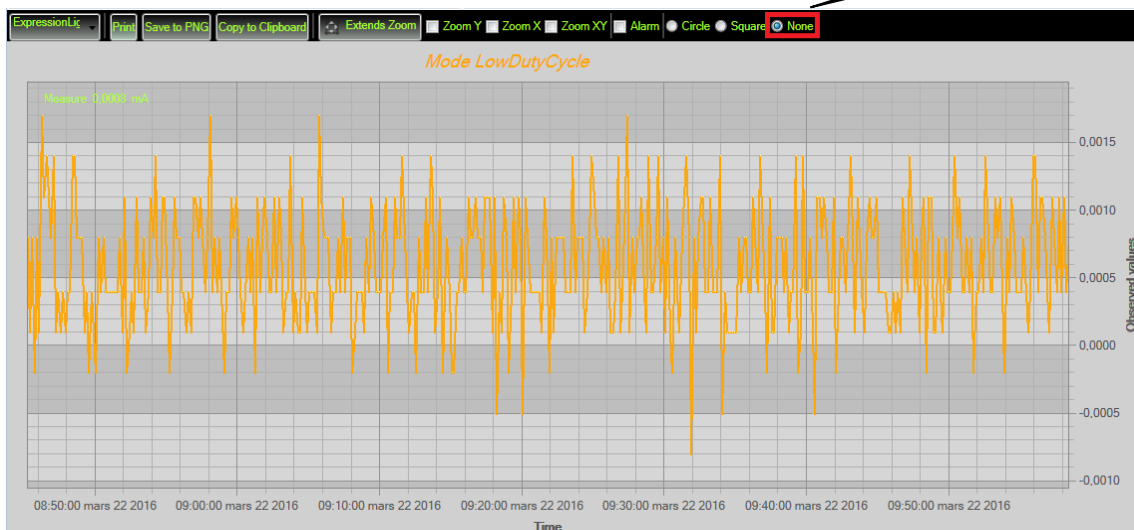

Square symbol activated

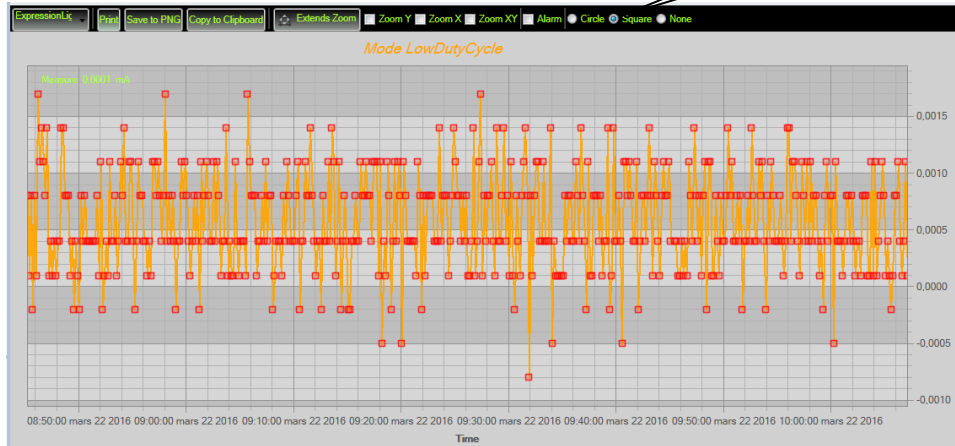


Circle symbol activated

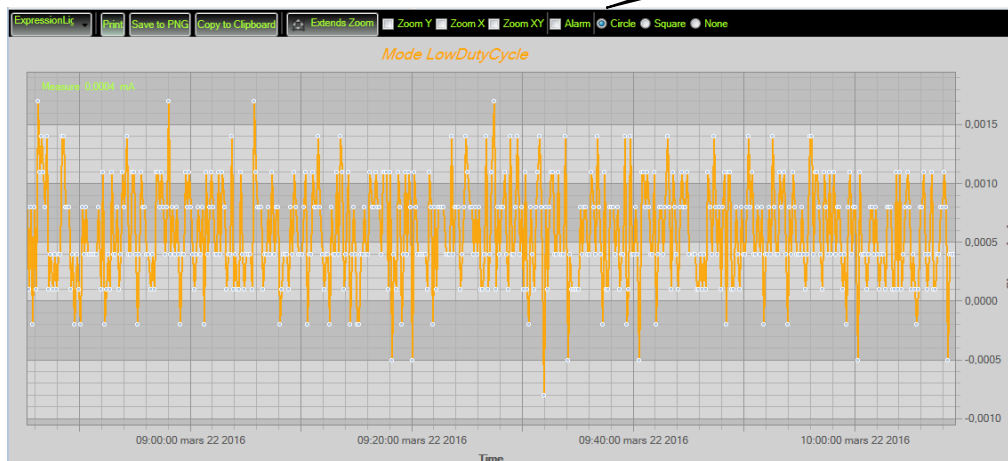

9.5.2.3 Frame : Scale

From this frame, the scaling of the graphics can be customized to suit your needs.



Checkbox "Zoom X and Y Zoom"

These boxes are useful for performing a graph zoom from the mouse wheel, there are four cases:

- **Case 1**: Case "Zoom X " ticked. The graph zoom will only affect the X axis.
- **Case 2**: Case "Zoom Y" ticked. The graph zoom will only affect the Y axis.
- **Case 3**: Case "Zoom XY " ticked." Zoom will affect both X and Y axes
- **Case 4**: Case "Zoom X ", "Zoom XY " and "Zoom Y " not ticked. The zoom function from the mouse wheel is disabled.

9.6 DATALOGGER CONFIGURATION




Please read the technical note [TN_RF_007 – "BeanDevice® DataLogger User Guide "](#)



9.7 LOG FILE & FOLDER ORGANIZATION (FOR EXPERIENCED USER USER)


9.7.1 Log file system overview

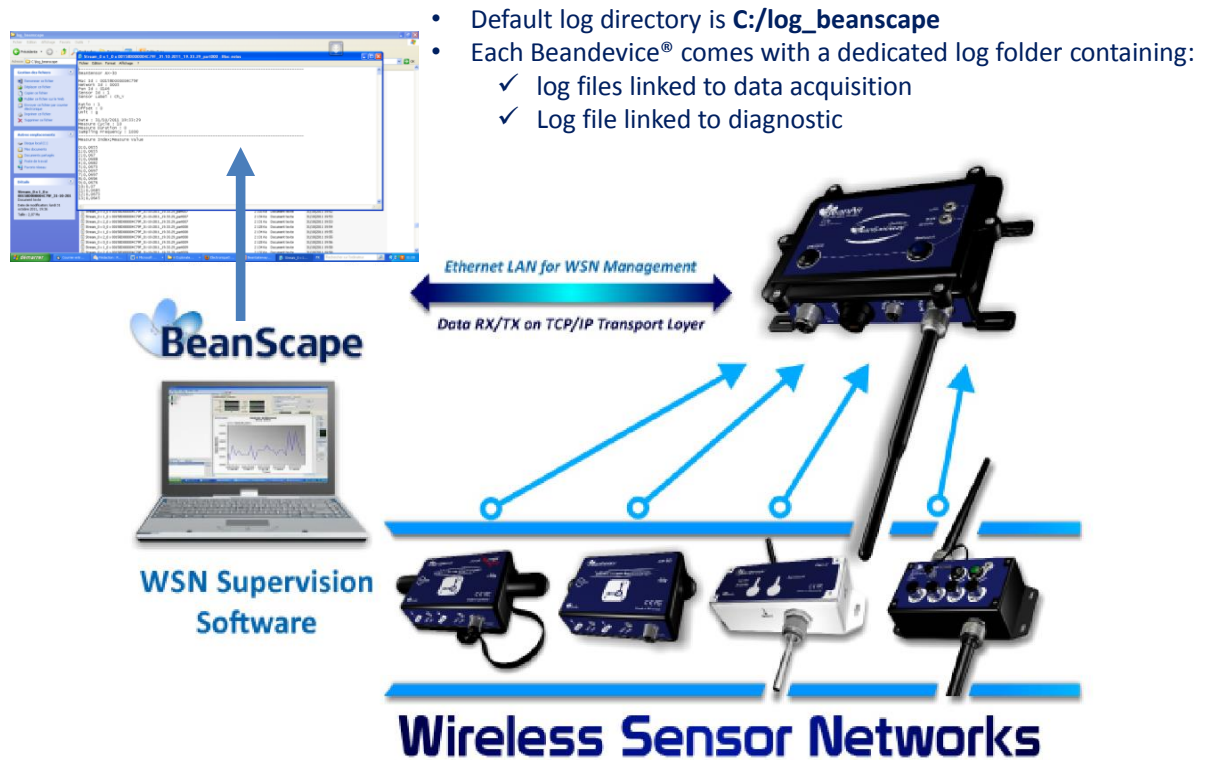

9.7.2 Log file directory


By default, the Log file directory is: **C:\log_beanscape**

Click on the tab Tools then Options to configure advanced settings in **BeanScope®**:

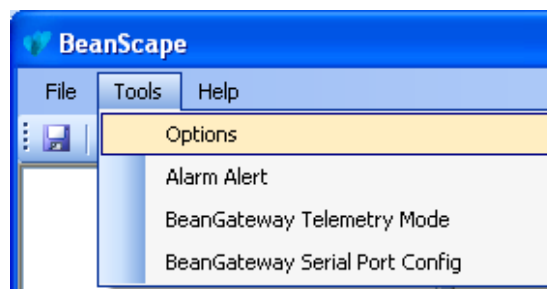

This window lets you configure the logs, and the data cache.

- ✓ A second window is displayed:

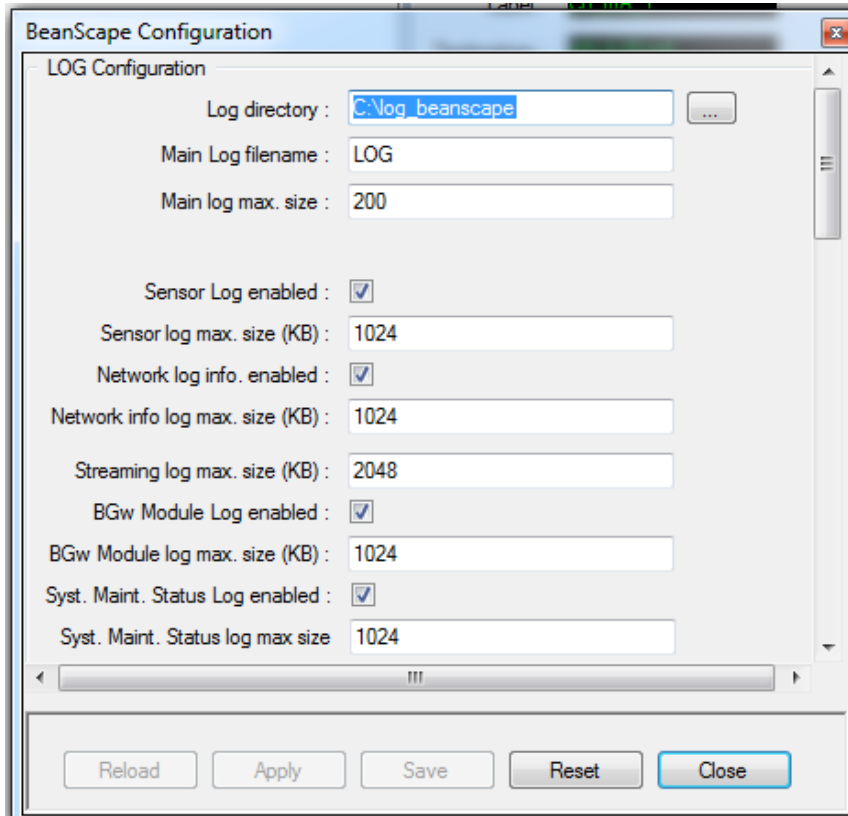

The screenshot shows the 'BeanScape Configuration' dialog box with the 'LOG Configuration' tab selected. The settings are as follows:

Field	Value
Log directory :	C:\log_beanscape
Main Log filename :	LOG
Main log max. size :	200
Sensor Log enabled :	<input checked="" type="checkbox"/>
Sensor log max. size (KB) :	1024
Network log info. enabled :	<input checked="" type="checkbox"/>
Network info log max. size (KB) :	1024
Streaming log max. size (KB) :	2048
BGw Module Log enabled :	<input checked="" type="checkbox"/>
BGw Module log max. size (KB) :	1024
Syst. Maint. Status Log enabled :	<input checked="" type="checkbox"/>
Syst. Maint. Status log max size :	1024

At the bottom of the dialog, there are five buttons: Reload, Apply, Save, Reset, and Close. The 'Reset' button is highlighted with a yellow box in the subsequent image.

- ✓ Clicking the button  reverts back to its original configuration.

9.7.3 Log folder



By Default, log files linked to the **BeanDevice®** are stored in the log folder (located in C:/log_beanscape directory):

“Folder MAC_ID”

Only the last 4 Char of BeanDevice® MAC ID are displayed.

User can change log folder name by clicking on “Custom display” tab located on the **BeanDevice®** profile:

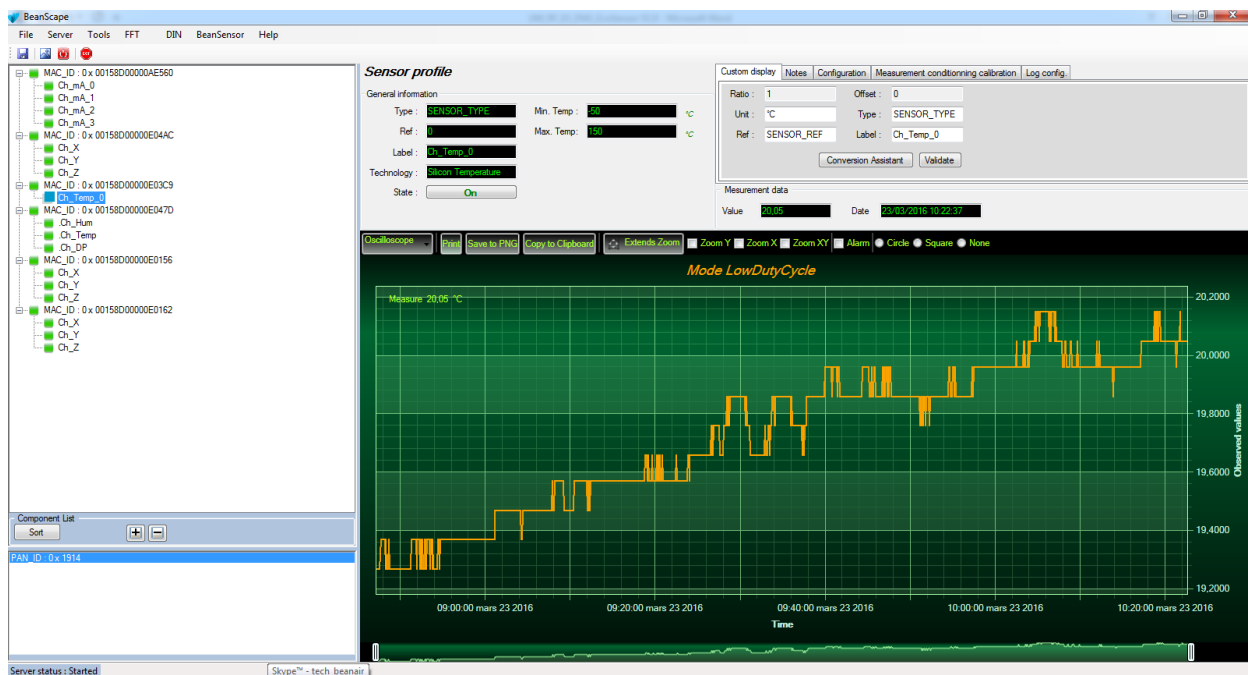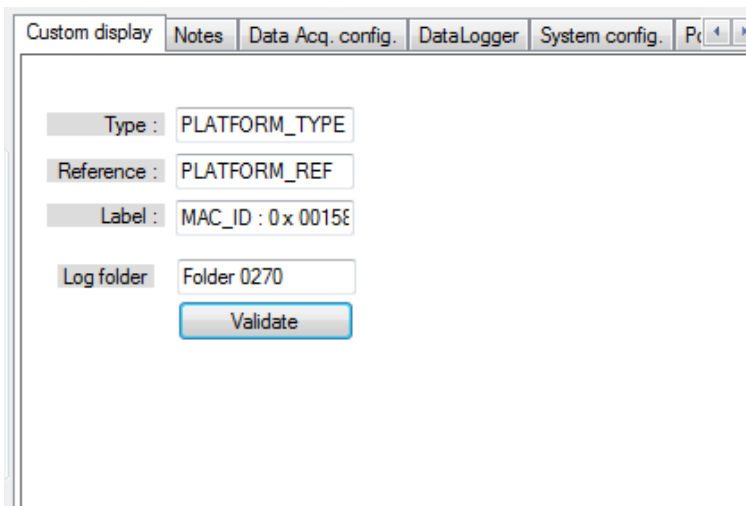

The screenshot shows the "Custom display" configuration dialog box. It has tabs for "Notes", "Data Acq. config.", "DataLogger", and "System config.". The "Data Acq. config." tab is active, showing the following fields:


- Type: PLATFORM_TYPE
- Reference: PLATFORM_REF
- Label: MAC_ID : 0 x 0015E
- Log folder: Folder 0270

 A "Validate" button is located at the bottom of the dialog.

Enter your own log folder name, then click on validate.

The following example shows the log folder changed to “Factory2”:



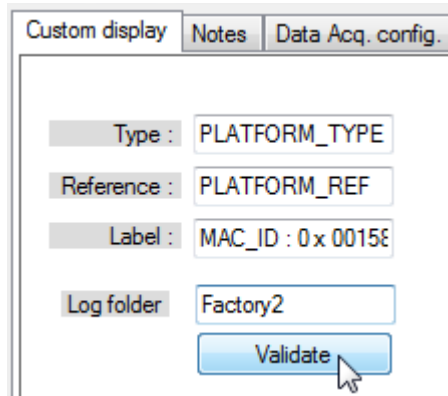

Custom display | Notes | Data Acq. config.

Type : PLATFORM_TYPE


Reference : PLATFORM_REF

Label : MAC_ID : 0x 0015E

Log folder : Factory2

Validate

9.7.4 Log file size configuration

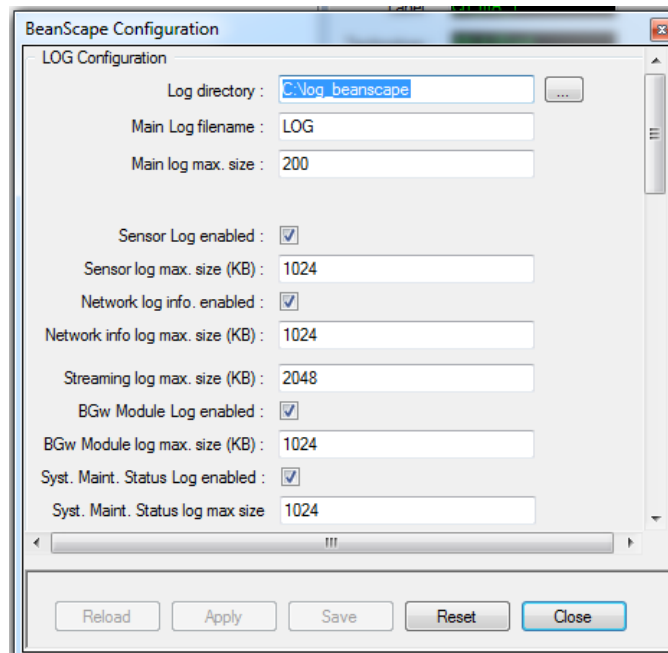

BeanScope Configuration

LOG Configuration

Log directory : C:\log_beanscape

Main Log filename : LOG

Main log max. size : 200

Sensor Log enabled :

Sensor log max. size (KB) : 1024

Network log info. enabled :

Network info log max. size (KB) : 1024

Streaming log max. size (KB) : 2048

BGW Module Log enabled :

BGW Module log max. size (KB) : 1024

Syst. Maint. Status Log enabled :

Syst. Maint. Status log max size : 1024

Reload Apply Save Reset Close

- ✓ **LOG directory:** Enter here the path/folder where you would want to save the LOG files.
- ✓ **Main log filename:** Here you may enter the desired name in order to save the LOG file.
- ✓ **Main log max. size (KB):** Maximum file size in Kilobytes (KB) for your principal LOG file
- ✓ **Sensor Log Enabled:** Check this box if you want to enable the sensor(s) data acquisition in your LOG file
- ✓ **Sensor log max. size (KB) :** Maximum size in Kilobytes (KB) of sensor log files (**except** for streaming packet data acquisition mode)
- ✓ **Network log info. enabled:** Check this box if you want to enable network information in your LOG file
- ✓ **Network info log max. size (KB) :** Maximum size in Kilobytes for your network information LOG file



- ✓ **Streaming log max. size:** Maximum size in Kilobytes (KB) of sensor log files (**only** for streaming packet data acquisition mode)

9.7.5 Log file generation

By default, 1 log file is linked to 1 sensor channel. The user can select a log file linked to all the sensor channels present on the BeanDevice®.

Log file generation

All sensor channels in one file

Separated

9.7.6 Cache Data configuration (for Graph)

Data Cache Configuration

Max. points :	<input type="text" value="40000"/>
Max. packets :	<input type="text" value="6"/>
Max. diagnostics :	<input type="text" value="1000"/>
Max. alarms :	<input type="text" value="25"/>
Gps coord. max. number :	<input type="text" value="100"/>
Max. streaming points :	<input type="text" value="10000"/>
Max. BGW Module status nbr. :	<input type="text" value="100"/>
Syst. Maint. Status max nbr :	<input type="text" value="500"/>

- ✓ **Maximum number of points:** Set here the maximum number of points displayed on the BeanScape® graph
- ✓ **Maximum number of packets:** Set here the maximum number of packets displayed on the BeanScape® graph
- ✓ **Max number of diagnostics:** Set here the maximum number of diagnostics displayed on the BeanScape® graph
- ✓ **Max number of alarms:** Set here the maximum number of alarms displayed on the BeanScape® graph
- ✓ **Maximum number of GPS coordinates:** Set here the maximum number of GPS information;
- ✓ **Maximum streaming points:** Set here the maximum number of points displayed in Streaming Packet on the BeanScape® graph





Please note that the values backed up by the BeanScope® may affect the memory capacity of your computer depending upon the size of every file.

9.7.7 Log file related to data acquisition


9.7.7.1 Log filename root

For each sensor channel a log file is automatically created by the BeanScope®.

The user can easily change the log file root:

Select the sensor channel

Click on « Log. Config » Tab

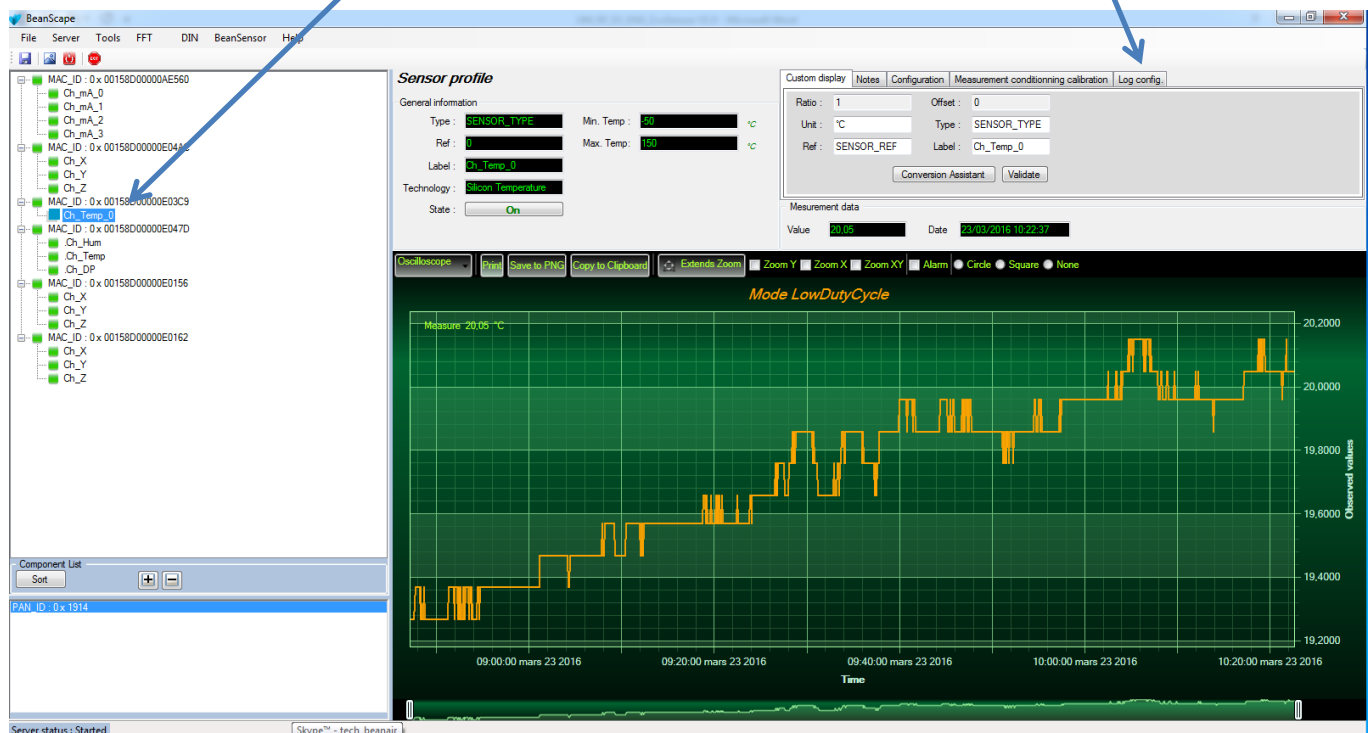


The screenshot shows the BeanScope software interface. On the left, a tree view lists sensor channels, with 'Ch_Temp_0' selected. A blue arrow points from the 'Select the sensor channel' callout to this channel. The main window displays the 'Sensor profile' for 'Ch_Temp_0', showing general information like 'Type: SENSOR_TYPE', 'Min. Temp: 50 °C', and 'Max. Temp: 150 °C'. A 'Log config' tab is active, showing 'Ratio: 1', 'Offset: 0', 'Unit: °C', and 'Type: SENSOR_TYPE'. A blue arrow points from the 'Click on « Log. Config » Tab' callout to this tab. Below the configuration, a graph shows 'Observed values' over time, with a 'Measure 20.06 °C' label and a 'Mode LowDutyCycle' indicator.



This tab should not be confused with the Datalogger feature available on the BeanDevice®.



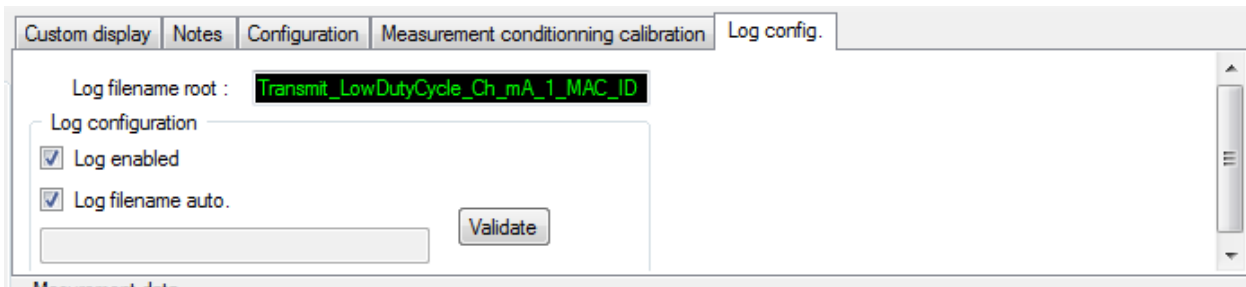

By default, Log file name is built with the measurement channel & **BeanDevice®** MAC Address:

< Sensor Channel Number > <MAC_ID>

- ✓ **Log enabled:** If checked, Log is enabled on the BeanScape®
- ✓ **Log filename auto.:** If checked, Log file name is named automatically

Click on **validate** in order to validate all your modifications.

For users who want to rename the log file, two solutions are provided:

Solution 1	<i>Add automatically the channel "Label" in your log file name: <Label><Sensor channel Number> <MAC_ID></i>
Solution 2	<i>The log file name can be fully customized: Uncheck the case « Log filename auto" and add your own label</i>

9.7.8 Log file related to Wireless Network diagnostic

9.7.8.1 Log filename organization

Wireless Diagnostic log filename is built as follow:

MAC_ID_WirelessNetwkInfo


- ✓ **MAC_ID:** *BeanDevice® MAC ID*
- ✓ **DATE:** *date when the streaming mode starts*



9.7.8.2 Log file analysis

Log file related to wireless network diagnostic provides the following information:

- **Date:** diagnostic date
- **LQI TX:** Link quality indicator on the BeanDevice® side
- **LQI RX:** Link quality indicator on the BeanGateway® side
- **Local PER Tx:** Local Packet Error Rate on the BeanDevice® side
- **Local PER Rx:** Local Packet Error Rate on the BeanGateway® side
- **Global PER:** N.A.
- **Battery voltage:** internal battery voltage
- **Battery level:** battery level of charge
- **Internal temperature:** Local temperature of the BeanDevice®

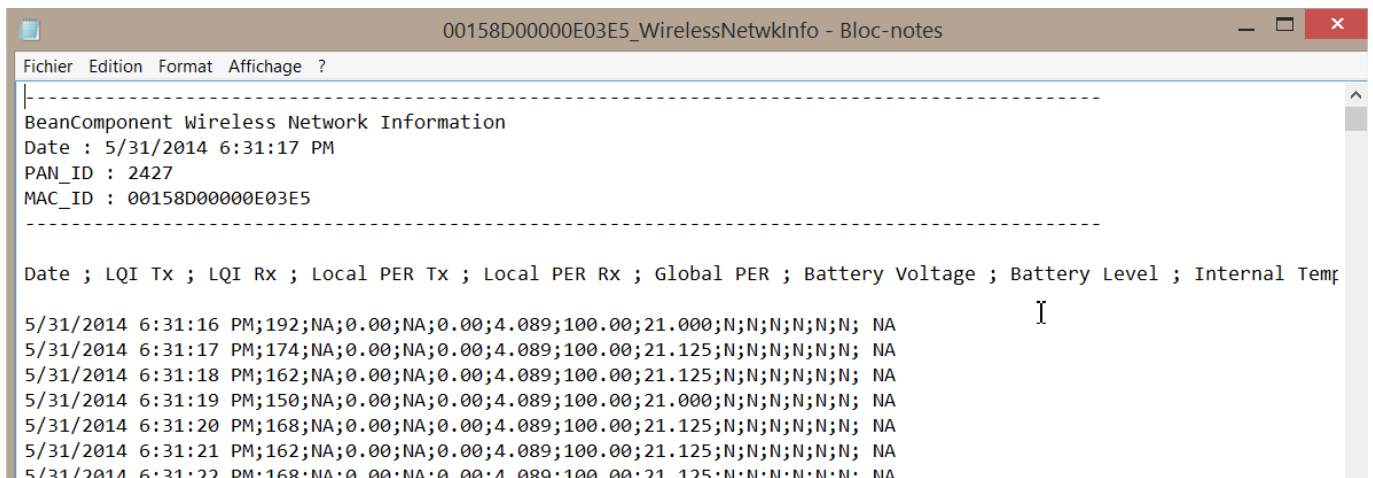

```
00158D00000E03E5_WirelessNetwkInfo - Bloc-notes
Fichier Edition Format Affichage ?
-----
BeanComponent Wireless Network Information
Date : 5/31/2014 6:31:17 PM
PAN_ID : 2427
MAC_ID : 00158D00000E03E5
-----

Date ; LQI Tx ; LQI Rx ; Local PER Tx ; Local PER Rx ; Global PER ; Battery Voltage ; Battery Level ; Internal Temp
5/31/2014 6:31:16 PM;192;NA;0.00;NA;0.00;4.089;100.00;21.000;N;N;N;N;N; NA
5/31/2014 6:31:17 PM;174;NA;0.00;NA;0.00;4.089;100.00;21.125;N;N;N;N;N; NA
5/31/2014 6:31:18 PM;162;NA;0.00;NA;0.00;4.089;100.00;21.125;N;N;N;N;N; NA
5/31/2014 6:31:19 PM;150;NA;0.00;NA;0.00;4.089;100.00;21.000;N;N;N;N;N; NA
5/31/2014 6:31:20 PM;168;NA;0.00;NA;0.00;4.089;100.00;21.125;N;N;N;N;N; NA
5/31/2014 6:31:21 PM;162;NA;0.00;NA;0.00;4.089;100.00;21.125;N;N;N;N;N; NA
5/31/2014 6:31:22 PM;168;NA;0.00;NA;0.00;4.089;100.00;21.125;N;N;N;N;N; NA
```

If the BeanDevice® is configured with the streaming packet data acquisition mode, the following diagnostic information are not refreshed:

- **Battery voltage**
- **Battery level**
- **Internal temperature**





“Rethinking sensing technology”

Document version : 1.10

Document type : User Manual

BeanDevice® User Manual – EcoSensor product lines

Fichier Edition Format Affichage ?


BeanComponent Wireless Network Information
Date : 5/15/2014 4:50:44 PM
PAN_ID : 31BB
MAC_ID : 00158D0000AD564

Date ; LQI Tx ; LQI Rx ; Local PER Tx ; Local PER Rx ; Global PER ; Battery Voltage ; Battery Level ; Internal Temperature


5/15/2014 4:50:43 PM;174;NA;0.00;NA;0.00;4.094;0.00;24.625;N;N;N;N;N; NA
15/05/2014 16:50:45.000000;168;;0.00;;
15/05/2014 16:50:45.150000;180;;0.00;;
15/05/2014 16:50:45.300000;162;;0.00;;
15/05/2014 16:50:45.450000;168;;0.00;;
15/05/2014 16:50:45.600000;174;;0.00;;
15/05/2014 16:50:45.750000;186;;0.00;;
15/05/2014 16:50:45.900000;138;;0.00;;
15/05/2014 16:50:46.050000;144;;0.00;;
15/05/2014 16:50:46.200000;160;;0.00;;

9.7.8.3 How to open a measurement file with excel

Step 1 : Open Excel

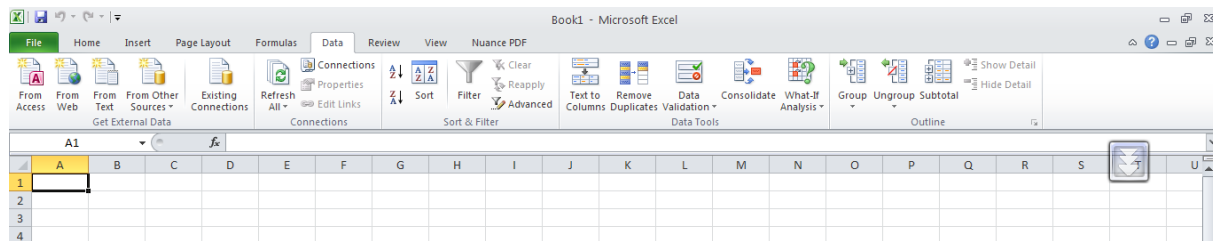


Step 2: Go on « Data » Tab, then select “From Text”

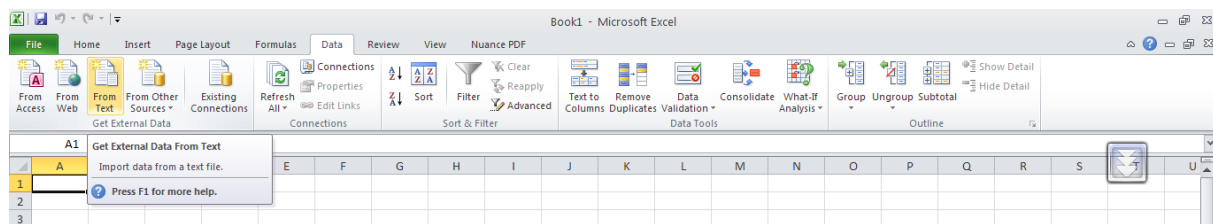


Step 3 : Choose your log file



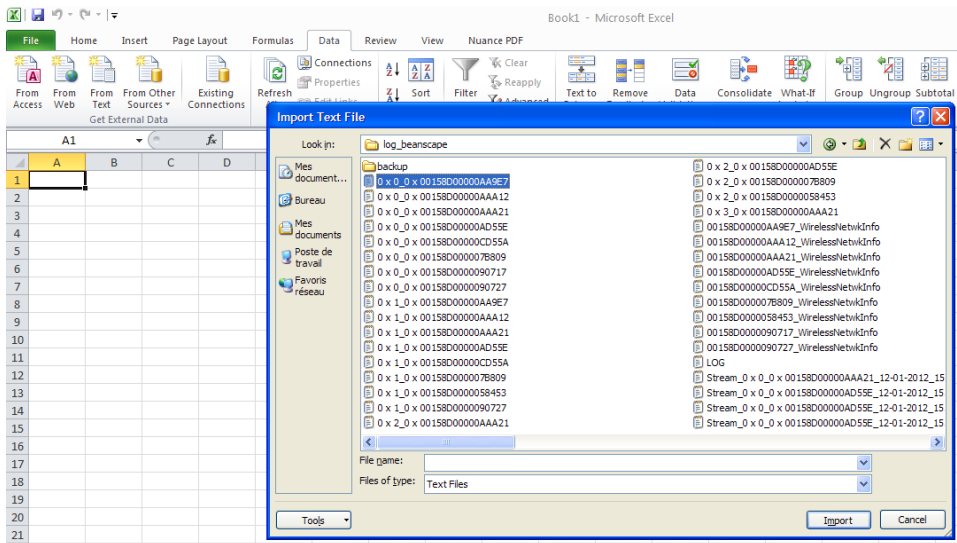


Step 4 : Text import wizard will open, select « Delimited » for Characters such as commas or tabs separate each field.

On “Start import at row” field: Select the number of lines that you want to suppress from the header:

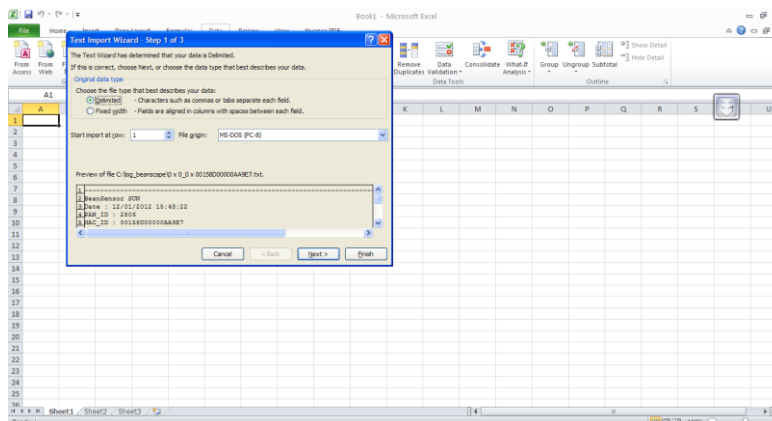

Select semicolon

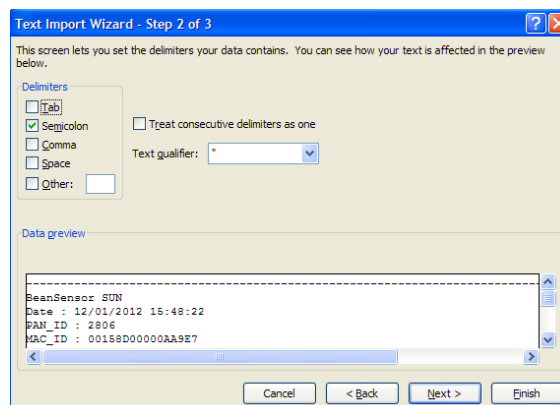

10. BEANDEVICE® MAINTENANCE & SUPERVISION (FOR EXPERIENCED USER)

This section allows to an experienced user to configure correctly the Wireless Sensor Networks.

10.1 EXTENDING THE BATTERY LIFE

The battery life depends on several parameters:

- ✓ Operating temperature
- ✓ Data acquisition cycle & mode



For further information about the current consumption on a BeanDevice® during sleeping & active power mode, please read the technical note: [TN RF 002 - Current consumption in active & sleeping mode](#)

The following table gives you a list of recommendations in order to extend the battery autonomy of your BeanDevice®:


Influence factors on battery autonomy	Observations	Recommendations
<i>Data acquisition cycle</i>		
<i>TX Power</i>	Power consumption will grow with the TX Power	If your wireless range is low, try to use a lower TX Power.
<i>Packet Error Rate (PER)</i>	A high packet error rate can cause a higher retransmission data and this increase the current consumption.	Try to replace your BeanDevice® in an area where the radio link is much better (see Link Quality Indicator value).

10.1 OVER-THE-AIR CONFIGURATION (OTAC) PARAMETERS

The BeanDevice® integrates an internal flash memory used for backing up OTAC (Over-the-air configuration) parameters.

This memory is organized into several levels:



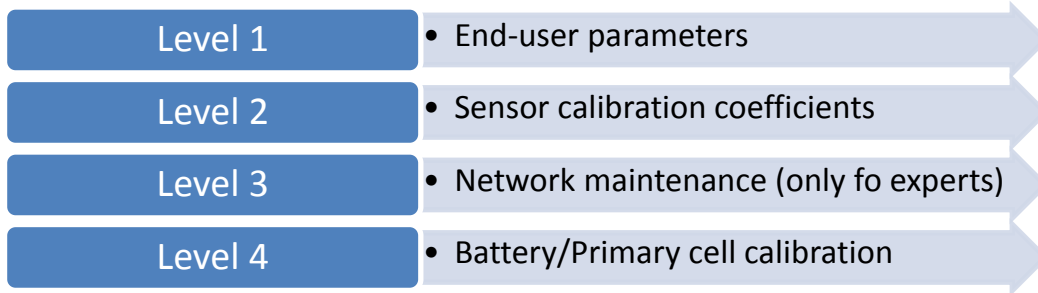

10.1.1 Level 1: End-user OTAC parameters

The following table presents all the defaults configuration parameters:

Parameter	BeanDevice® version			
	ONE-T	ONE-TH	ONE-TIR	ONE-BN
Power Mode	Sleeping with Network listening			
Data Acquisition duty cycle	1 minute			
Data Acquisition mode	LowDutyCycle			
TX Power	+15dBm			
Alarms Threshold	H1 :2 ou10 H2 :2 ou 10 S2 :-2 ou -10 S1 :-2 ou -10	H1 :20 H2 :20 S2 :0 S1 :0	H1 :20 H2 :20 S2 :0 S1 :0	H1 :20 H2 :20 S2 :0 S1 :0



To restore these defaults parameters, you must perform a Network context deletion. The user should press the button network ("Network") network for more than 2 seconds.





Level 2, 3 & 4 of Configuration parameters are not affected by network context deletion (by hardware or software)

10.2 NETWORK DIAGNOSTIC FROM YOUR BEANSCAPE® SOFTWARE

This chapter describes the network diagnostic tool available on the BeanScape®.

10.2.1 Sensor operating status

Two states of the sensor operating status exist:

- **On** : the sensor is enabled
- **Off** : the sensor is disabled




The BeanDevice® checks the sensor connection and its status. It decides to disable the sensor when:

- ✓ The sensor is disconnected;
- ✓ A short-circuit is present on the sensor;
- ✓ The sensor doesn't respond;

10.2.2 Displaying Network information

From your BeanScape® interface, click on a BeanDevice® profile displayed on the left window, a tab "BeanDevice" will appear on the top of the window. Click on this tab, then click "View History Network".




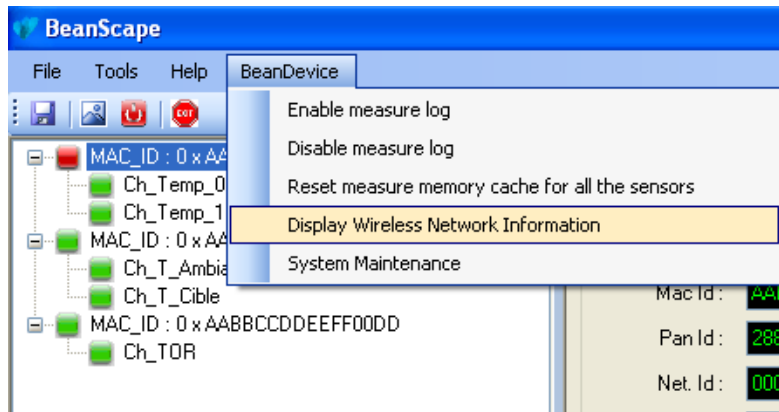

A new window will appear:

PER : Packet error rate

LQI : Link quality Indicator

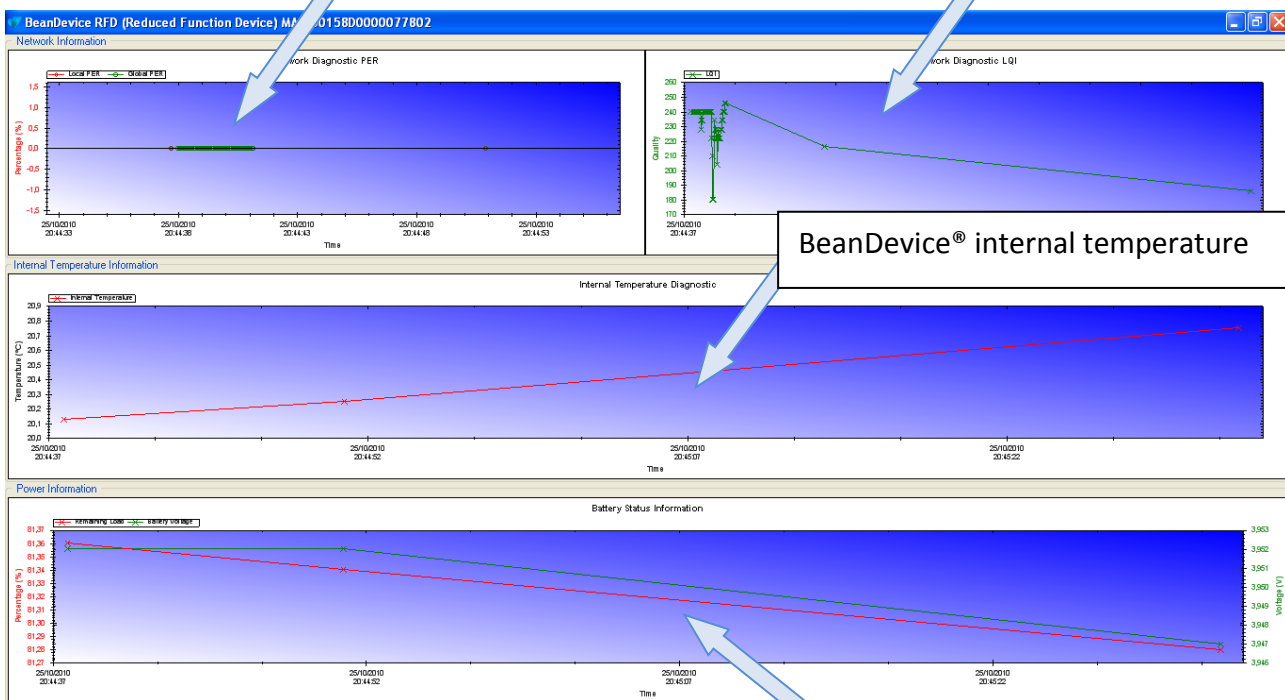

BeanDevice® internal temperature

Battery voltage & charge



✓ **PER (Packet Error Rate):**

Packet error rate (PER) is the number packet errors divided by the total number of transferred packet during a studied time interval. PER is a unit less performance measure, often expressed as a percentage number.

PER is only available with IEEE 802.15.4 Network, it represents the ratio of "lost data/data send" between the BeanDevice® and the BeanGateway®.

✓ **LQI (Link Quality Indicator)**

LQI (Link Quality Indicator) represents the radio signal quality in your Environment. It is possible that LQI is low due to EMC interference or metal presence in the environment.

If you encounter such problems, several solutions are proposed to increase your LQI:

- ✓ Use the Maximum TX Power on your BeanDevice. The maximum TX Power authorized in Europe for indoor application is 12 dBm. For Outdoor application, you are authorized to extend the TX Power to 18 dBm. You can easily configure the TX Power on your BeanDevice from your BeanScape WSN software supervision.
- ✓ Try to configure your receiver antenna and your transmitter antenna on the same antenna pattern (cf. the Beam with of your antenna)
- ✓ Use a high gain antenna (in outdoor use only) for a better RF Link Budget
- ✓ Fix your BeanDevice & BeanGateway on a top of a mast or a building.



For further information, read the application note on "How to extend your wireless range?"

■ **Internal temperature monitoring**

An internal temperature sensor is used for onboard & battery temperature monitoring

■ **Battery charge monitoring**



Battery charge is based on current accumulation. The BeanDevice® integrates a current accumulator circuit which facilitates remaining capacity estimation by tracking the net current flow into and out of the battery. Current flow into the battery increments the current accumulator while current flow out of the battery decrements it.

Voltage measurement corresponds to battery voltage.



10.2.1 System maintenance (for expert only)


This section is dedicated to experimented persons in Wireless sensor networks. Configuring wrongly on such an interface may cause malfunction your BeanDevice®.

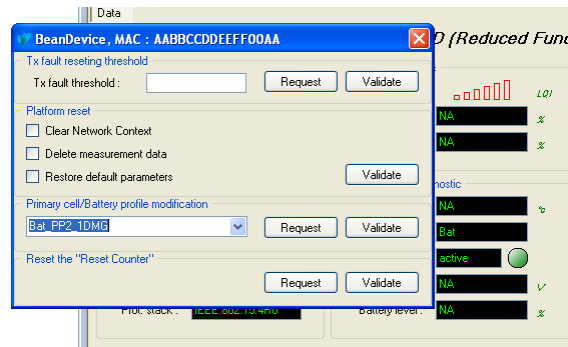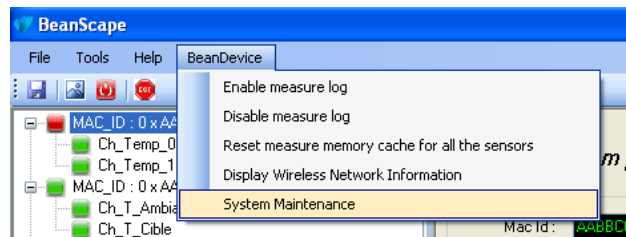

- ✓ **TX Fault Threshold**: By default, this value is fixed to 15. This value allows to set the threshold for TX failure transmission before a reboot system
- ✓ **Clear Network context (software)** : This option may be substituted for the push button "Network". However, when the BeanDevice® is not available (not powered or in sleeping mode) this option is not usable.
- ✓ **Delete measurement data**: Delete stored measurements.
- ✓ **Restore default parameters**: This function restores all the default parameters stored on the BeanDevice flash memory
- ✓ **Primary Cell/Battery profile modifications**: You can change your primary cell / battery profile here;
- ✓ **Reset the « Reset counter »** : resets the reset counter which is used for BeanDevice reboot ;

The following diagram describes how the BeanDevice® is restarted after radio transmission failures:



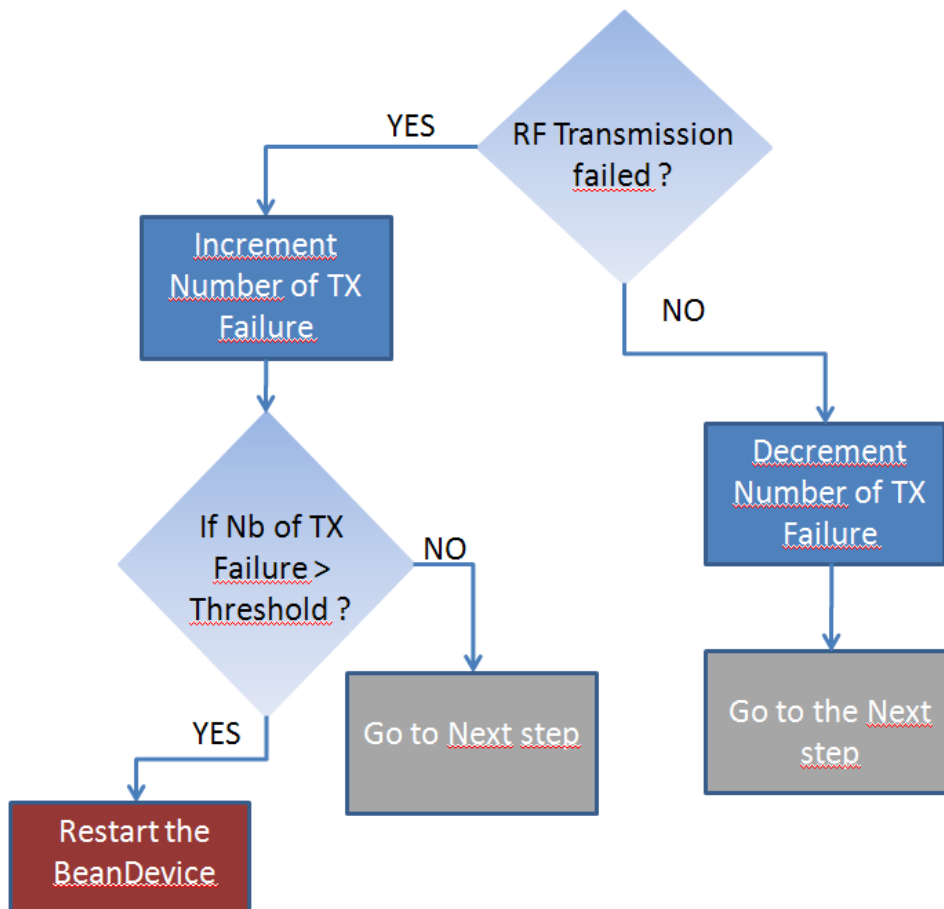


10.2.1 Scrolling menu « BeanSensor »

The BeanSensor® scrolling menu provides access to additional features: like the multi-graph mode (display of multiple windows on a graph measuring the same screen), deleting graphs displayed and the activation / deactivation of logging measurements.

To access to this scrolling menu, click on the sensor attached to your BeanDevice®. You will then see the BeanSensor® scrolling menu appearing.



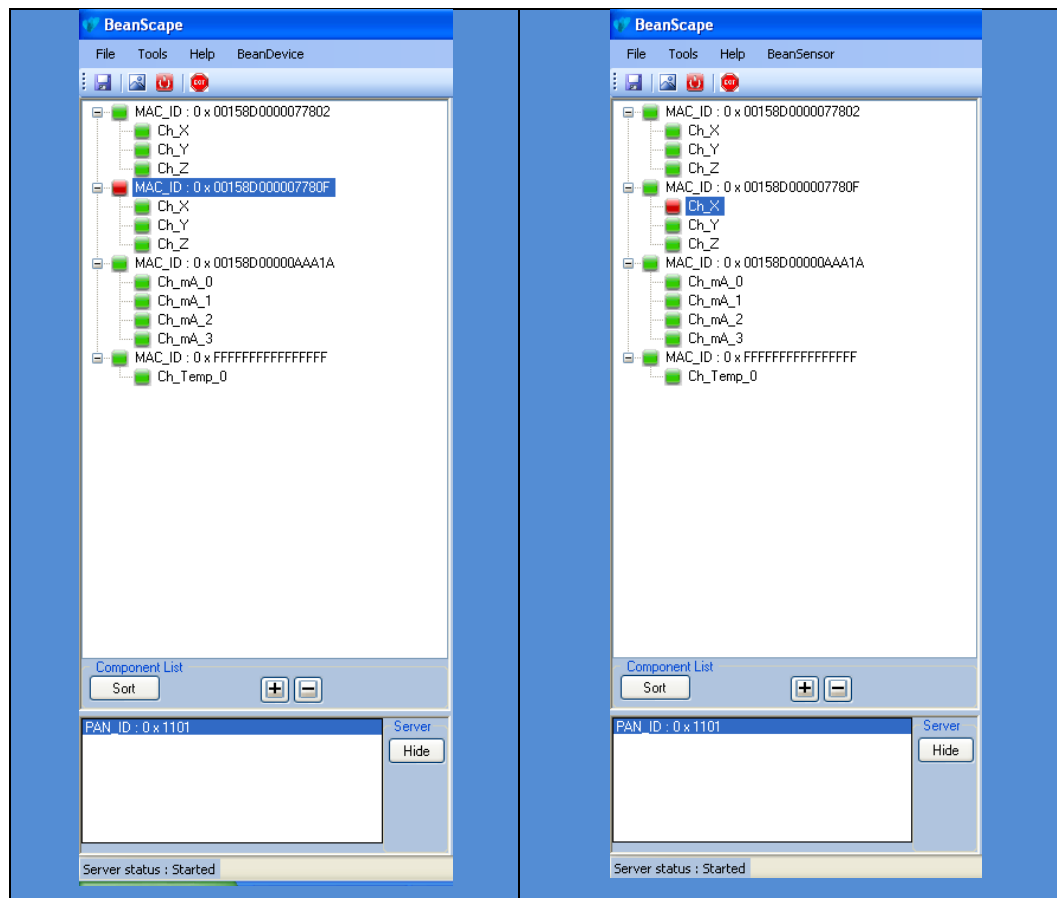



By clicking on the scrolling menu « BeanSensor », you can access to the following features :

Disable/Enable log

All the data received on the BeanScope® are stored in a log file in CSV format.

This feature allows you to enable / disable data logging on your log file.

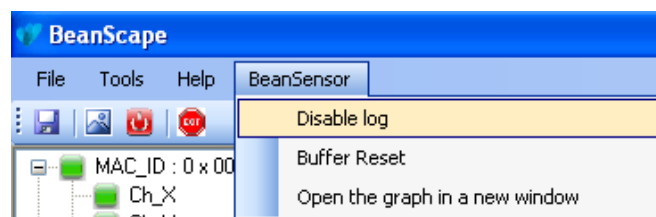

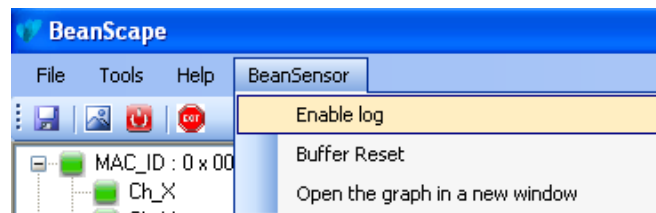


For further information about CSV log file, please read the BeanScape® user manual.


Buffer reset

This function clears the graphical display concerning recorded measurements of your sensor. The data stored in a log are not affected by this function.

By clicking on « Buffer reset », a second window appears asking you to confirm your choice:


- ✓ Yes, you accept to delete the whole measure data of this BeanSensor;
- ✓ No, don't delete the whole measure data of this BeanSensor;

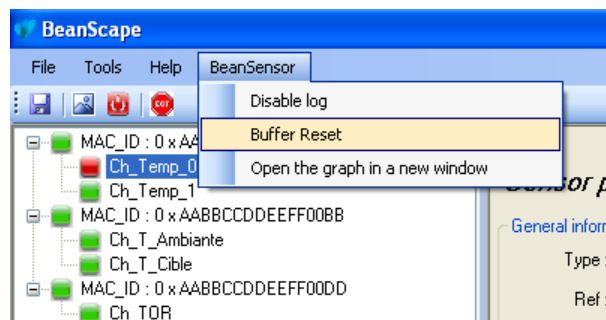

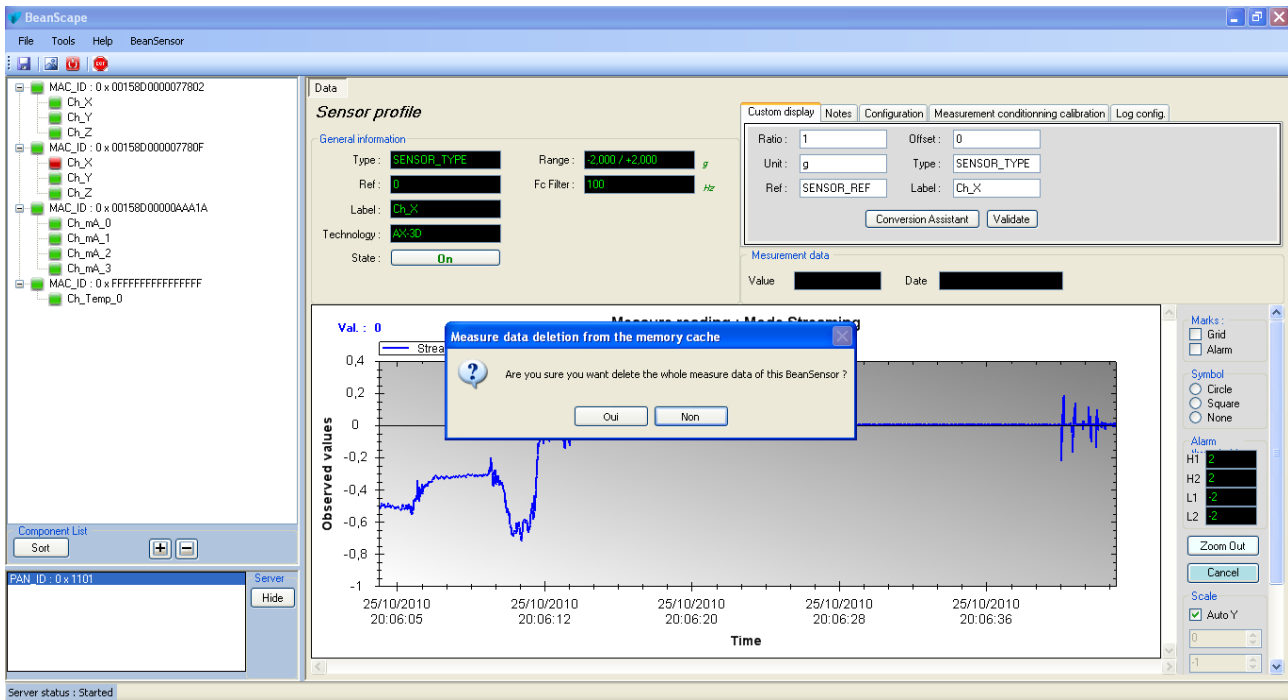


Open the graph in a new window

By clicking on “Open the graph in a new window”, you can open a graph corresponding to your sensor.

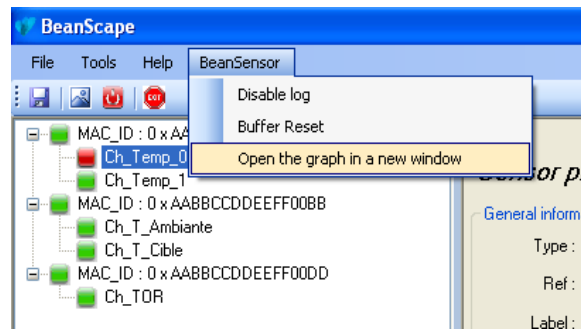

You can easily open several graphs in a window.



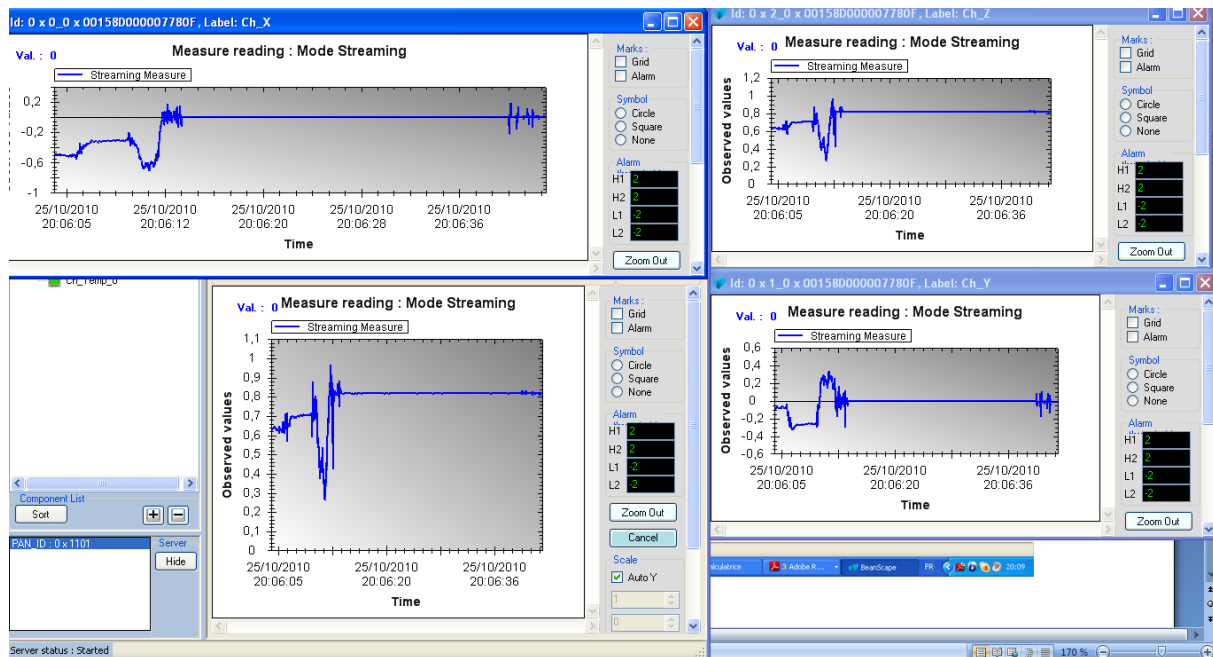

The multi-graph mode requires a lot of resources on your computer, it is recommended to install the BeanScape® software on a powerful computer.





"Rethinking sensing technology"

Document version : 1.10

Document type : User Manual

BeanDevice® User Manual –
EcoSensor product lines

11. FAQ

Visit our FAQ page:

<http://www.industrial-wsn.com/category/faq/>



Please consider the environment before printing this document.

Page : 101 / 101